



COMBIVERT F6

INSTRUCTIONS FOR USE | **INSTALLATION F6 HOUSING 2**
PEAK POWER

Translation of the original manual
Document 20316789 EN 03

Preface

The hardware and software described in this document are products of KEB. The information contained in this document is valid at the time of publishing. KEB reserves the right to update this document in response to misprints, mistakes or technical changes.

Signal words and symbols

Certain procedures within this document can cause safety hazards during the installation or operation of the device. Refer to the safety warnings in this document when performing these procedures. Safety signs are also located on the device where applicable. A safety warning is marked by one of the following warning signs:

 DANGER	Dangerous situation, which will cause death or serious injury if this safety warning is ignored.
 WARNING	Dangerous situation, which may cause death or serious injury if this safety warning is ignored.
 CAUTION	Dangerous situation, which may cause minor injury if this safety warning is ignored.
NOTICE	Situation, which can cause damage to property if this safety warning is ignored.

RESTRICTION

Used when the following statements depend on certain conditions or are only valid for certain ranges of values.



Used for informational messages or recommended procedures.

More symbols

- This arrow starts an action step.
- / - Enumerations are marked with dots or indents.
- => Cross reference to another chapter or another page.



Note to further documentation.
<https://www.keb-automation.com/search>



Laws and guidelines

KEB Automation KG confirms with the EC declaration of conformity and the CE mark on the device nameplate that it complies with the essential safety requirements.

The EC declaration of conformity can be downloaded on demand via our website.

Warranty and liability

The warranty and liability on design, material or workmanship for the acquired device is given in the general sales conditions.



Here you will find our general sales conditions.

<https://www.keb-automation.com/terms-conditions>



Further agreements or specifications require a written confirmation.

Support

Although multiple applications are referenced, not every case has been taking into account. If you require further information or if problems occur which are not referenced in the documentation, you can request the necessary information via the local KEB agency.

The use of our units in the target products is outside of our control and therefore lies exclusively in the area of responsibility of the customer.

The information contained in the technical documentation, as well as any user-specific advice in spoken and written and through tests, are made to best of our knowledge and information about the intended use. However, they are regarded as being only informal and changes are expressly reserved, in particular due to technical changes. This also applies to any violation of industrial property rights of a third-party. Selection of our units in view of their suitability for the intended use must be done generally by the user.

Tests can only be done within the intended end use of the product (application) by the customer. They must be repeated, even if only parts of hardware, software or the unit adjustment are modified.

Copyright

The customer may use the instructions for use as well as further documents or parts from it for internal purposes. Copyrights are with KEB and remain valid in its entirety.

This KEB product or parts thereof may contain third-party software, including free and/or open source software. If applicable, the license terms of this software are contained in the instructions for use. The instructions for use are already available to you, can be downloaded free of charge from the KEB website or can be requested from the respective KEB contact person.

Other wordmarks or/and logos are trademarks (™) or registered trademarks (®) of their respective owners.

Table of Contents

Preface	3
Signal words and symbols	3
More symbols.....	3
Laws and guidelines.....	4
Warranty and liability.....	4
Support	4
Copyright.....	4
Table of Contents	5
1 Basic Safety Instructions.....	8
1.1 Target group.....	8
1.2 Transport, storage and proper use	8
1.3 Installation.....	9
1.4 Electrical connection	10
1.4.1 EMC-compatible installation.....	11
1.4.2 Voltage test.....	11
1.4.3 Insulation measurement.....	11
1.5 Start-up and operation	12
1.6 Maintenance.....	13
1.7 Repair	14
1.8 Disposal.....	15
2 Product Description	16
2.1 Specified application.....	16
2.1.1 Residual risks	16
2.2 Unintended use.....	16
2.3 Product features	17
2.4 Part code	18
2.5 Nameplate	20
2.5.1 Configurable options	21
3 Technical data	22
3.1 Operating conditions	22
3.1.1 Climatic environmental conditions.....	22
3.1.2 Mechanical environmental conditions	23
3.1.3 Further environmental operating conditions	23
3.1.4 Electrical operating conditions.....	24
3.1.4.1 Device classification	24
3.1.4.2 Electromagnetic compatibility.....	24
3.2 Device data of the Peak Power devices	25
3.2.1 Overview of the Peak Power devices.....	25

TABLE OF CONTENTS

3.2.2 Voltage and frequencies for 400V devices	26
3.2.2.1 Example of the calculation of the possible motor voltage:	27
3.2.3 Input and output currents / overload for Peak Power devices	27
3.2.3.1 Overload characteristic (OL) for Peak Power devices	28
3.2.3.2 Frequency-dependent maximum current (OL2) for Peak Power devices	30
3.2.4 Overview of rectifier data for 400 V devices	34
3.2.5 Power dissipation at rated operation of the 400V devices	34
3.2.6 Fuse protection of the drive controllers of the Peak Power devices	35
3.2.6.1 Protection of peak power devices with AC supply	35
3.2.6.2 Protection fusing of 400 V devices with DC supply	36
3.2.6.3 Motor protective circuit-breaker / circuit breaker	37
3.3 General electrical data	38
3.3.1 Switching frequency and temperature	38
3.3.1.1 Switching frequency and temperature of the Peak Power devices	38
3.3.2 DC link / braking transistor function	39
3.3.2.1 DC link / braking transistor function of the Peak Power devices	40
3.3.3 Fan	41
3.3.3.1 Switching behaviour of the fans	42
3.3.3.2 Switching points of the fans	42
4 Installation	43
4.1 Dimensions and weights	43
4.1.1 Built-in version air cooler	43
4.1.2 Push-through version air cooler IP20-ready	44
4.1.3 Push-through version air-cooling IP54-ready	45
4.2 Control cabinet installation	46
4.2.1 Mounting instructions	46
4.2.2 Mounting distances	47
4.2.3 Installation of IP54-ready devices	48
4.2.4 Control cabinet ventilation	49
4.2.5 Airflow of the drive converter	49
5 Installation and connection	50
5.1 Overview of the COMBIVERT F6	50
5.2 Connection of the power unit	53
5.2.1 Connection of the voltage supply	53
5.2.1.1 Terminal block X1A device size 14 and 15	54
5.2.1.2 Terminal block X1A device size 16	55
5.2.2 Protective earth and functional earth	56
5.2.2.1 Protective earth	56
5.2.2.2 Functional earthing	56
5.3 Mains connection	57
5.3.1 Supply cable	57

5.3.2 AC mains connection.....	57
5.3.2.1 AC supply 3-phase	57
5.3.2.2 Note on hard power systems.....	58
5.3.3 DC mains connection	59
5.3.3.1 Terminal block X1A DC connection device size 14 and 15	59
5.3.3.3 Connection at DC voltage supply	60
5.3.3.2 Terminal block X1A DC connection device size 16	60
5.3.4 Connection of the motor	61
5.3.4.1 Wiring of the motor	61
5.3.4.2 Terminal block X1A motor connection device size 14 and 15	62
5.3.4.3 Terminal block X1A motor connection device size 16	62
5.3.4.4 Selection of the motor line.....	63
5.3.4.5 Motor cable length and conducted interferences at AC supply	63
5.3.4.6 Motor cable length for parallel operation of motors	64
5.3.4.7 Motor cable cross-section	64
5.3.4.8 Interconnection of the motor.....	64
5.3.4.9 Connection of the temperature monitoring and brake control (X1C).....	65
5.3.5 Connection and use of a braking resistor	67
5.3.5.1 Terminal block X1A connection braking resistor device size 14 and 15.....	68
5.3.5.2 Terminal block X1A connection braking resistor device size 16	68
5.3.5.3 Use of intrinsically safe braking resistors	69
5.3.5.4 Use of non-intrinsically safe braking resistors	69
5.3.6 DC-bus connection.....	70
5.4 Accessories	72
5.4.1 Filters and chokes	72
5.4.2 Mounting kit shield connection brackets	72
5.4.3 Seal for IP54-ready devices	72
5.4.4 Side-mounted braking resistors.....	73
6 Approvals and certifications	74
6.1 CE-Marking.....	74
6.2 UL certification	75
6.3 Further informations and documentation	77
7 Revision history	78
Glossary	79
List of Figures	81
List of Tables.....	82

1 Basic Safety Instructions

The products are designed and constructed in accordance with state-of-the-art technology and the recognized safety rules and regulations. However, the use of such devices may cause functional hazards for life and limb of the user or third parties, or damages to the system and other material property.

The following safety instructions have been created by the manufacturer for the area of electric drive technology. They can be supplemented by local, country- or application-specific safety instructions. This list is not exhaustive. Violation of the safety instructions by the customer, user or other third party leads to the loss of all resulting claims against the manufacturer.

NOTICE



Hazards and risks through ignorance!

- ▶ Read the instructions for use!
- ▶ Observe the safety and warning instructions!
- ▶ If anything is unclear, please contact KEB Automation KG!

1.1 Target group

This instruction manual is determined exclusively for electrical personnel. Electrical personnel for the purpose of this instruction manual must have the following qualifications:

- Knowledge and understanding of the safety instructions.
- Skills for installation and assembly.
- Start-up and operation of the product.
- Understanding of the function in the used machine.
- Detection of hazards and risks of the electrical drive technology.
- Knowledge of [VDE 0100](#)
- Knowledge of national safety regulations.

1.2 Transport, storage and proper use

The transport is carried out by qualified persons in accordance with the environmental conditions specified in this manual. Drive controller shall be protected against excessive strains.



Transport of drive controllers with an edge length >75 cm

The transport by forklift without suitable tools can cause a deflection of the heat sink. This leads to premature aging or destruction of internal components.

- ▶ Transport of drive controllers on suitable pallets.
- ▶ Do not stack drive controllers or burden them with other heavy objects.

NOTICE

Damage to the coolant connections

Bending of the tubes!

- ▶ Never place the device on the coolant connections



Drive controllers contain electrostatic sensitive components.

- ▶ Avoid contact.
 - ▶ Wear ESD-protective clothing.
-

Do not store drive controllers

- in the environment of aggressive and/or conductive liquids or gases.
- with direct sunlight.
- outside the specified environmental conditions.

1.3 Installation

⚠ DANGER


Do not operate in an explosive environment!

- ▶ The product is not intended for the use in potentially explosive environment.
-

⚠ CAUTION


Design-related edges and high weight!
Contusions and bruises!

- ▶ Never stand under suspended loads.
 - ▶ Wear safety shoes.
 - ▶ Secure drive controller accordingly when using lifting gear.
-

To prevent damages to the device:

- Make sure that no components are bent and/or isolation distances are changed.
- The device must not be put into operation in case of mechanical defects.
- Do not allow moisture or mist to penetrate the unit.
- Avoid dust permeating the device. Allow for sufficient heat dissipation if installed in a dust-proof housing.
- Note installation position and minimum distances to surrounding elements. Do not cover the ventilation openings.
- Mount the drive controller according to the specified degree of protection.
- Make sure that no small parts fall into the product during assembly and wiring (drilling chips, screws etc.). This also applies to mechanical components, which can lose small parts during operation.
- Check the reliable fit of the device connections in order to avoid contact resistances and sparking.
- Do not walk-on drive controller.
- Follow all safety instructions!

1.4 Electrical connection

⚠ DANGER**Voltage at the terminals and in the device !****Danger to life due to electric shock !**

- ▶ Never work on the open device or never touch exposed parts.
- ▶ For any work on the unit switch off the supply voltage, secure it against switching on and check absence of voltage by measuring at the input terminals.
- ▶ Wait until all drives has been stopped in order that no regenerative energy can be generated.
- ▶ Await capacitor discharge time (5 minutes). Check absence of voltage by measuring at the DC terminals.
- ▶ If personal protection is required, install suitable protective devices for drive converters.
- ▶ Never bridge upstream protective devices (even for testing purposes).
- ▶ Connect the protective earth conductor always to drive converter and motor.
- ▶ Install all required covers and protective devices for operation.
- ▶ The control cabinet shall be kept closed during operation.
- ▶ Residual current: This product may cause a dc current in the protective earth conductor. When a residual current protective device (RCD) or a residual current monitoring device (RCM) is used for the protection against direct or indirect contact, only a RCD or RCM type B is permitted on the power supply side of this product.
- ▶ Drive converters with a leakage current > 3.5mA AC current (10mA DC current) are intended for a stationary connection. Protective earth conductors must be designed in accordance with the local regulations for equipment with high leakage currents according to *EN 61800-5-1*, *EN 60204-1* or *VDE 0100*.



If personnel protection is required during installation of the system, suitable protective devices must be used for drive controllers.

www.keb.de/fileadmin/media/Techinfo/dr/tn/ti_dr_tn-rcd-00008_en.pdf



Installations which include drive controller shall be equipped with additional control and protective devices in accordance with the relevant applicable safety requirements, e.g. act respecting technical equipment, accident prevention rules etc. They must always be complied with, also for drive controller bearing a CE marking.

For a trouble-free and safe operation, please pay attention to the following instructions:

- The electrical installation shall be carried out in accordance with the relevant requirements.
- Cable cross-sections and fuses must be dimensioned by the user according to the specified minimum/maximum values for the application.
- Connection of the drive converter is only permissible on symmetrical networks with a maximum line voltage (L1, L2, L3) with respect to earth (N/PE) of max. 300 V, USA UL: 480 / 277 V. An isolating transformer must be used for supply networks which exceed this value! In case of non-compliance the control is not longer considered to be a PELV circuit.
- With existing or newly wired circuits the person installing the units or machines must ensure that the PELV requirements are met.
- For drive converters that are not isolated from the supply circuit (in accordance with [EN 60721-3-2](#)) all control lines must be included in other protective measures (e.g. double insulation or shielded, earthed and insulated).
- When using components without isolated inputs/outputs, it is necessary that equipotential bonding exists between the components to be connected (e.g. by the equipotential line). Disregard can cause destruction of the components by equalizing currents.

1.4.1 EMC-compatible installation

Observance of the limit values required by EMC law is the responsibility of the customer.



Notes on EMC-compatible installation can be found here.
www.keb.de/fileadmin/media/Manuals/dr/emv/0000neb0000.pdf



1.4.2 Voltage test

Testing with AC voltage (in accordance with [EN 60204-1](#) chapter 18.4) may not be executed, since there is danger for the power semiconductors in the drive controller.



Due to the radio interference suppression capacitors, the test generator will switch off immediately with a current fault.



According to [EN 60204-1](#) it is permissible to disconnect already tested components. Drive controllers of the KEB Automation KG are delivered ex works voltage tested to 100% according to product standard.


1.4.3 Insulation measurement

An insulation measurement (in accordance with [EN 60204-1](#) chapter 18.3) with DC 500 V is permissible, if all power unit connections (grid-connected potential) and all control connections are bridged with PE. The insulation resistance of the respective device can be found in the technical data.

1.5 Start-up and operation

The start-up (i.e. for the specified application) is forbidden until it is determined that the installation complies with the machine directive; account is to be taken of [EN 60204-1](#).

⚠ WARNING

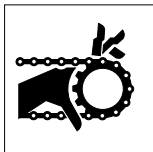

Software protection and programming!

Hazards caused by unintentional behavior of the drive!

- ▶ Check especially during initial start-up or replacement of the drive controller if parameterization is compatible to application.
- ▶ Securing a unit solely with software-supported functions is not sufficient. It is imperative to install external protective measures (e.g. limit switch) that are independent of the drive controller.
- ▶ Secure motors against automatic restart.

⚠ CAUTION



High temperatures at heat sink and coolant!

Burning of the skin!

- ▶ Cover hot surfaces safe-to-touch.
- ▶ If necessary, attach warning signs on the system.
- ▶ Before touching, check the surface and coolant lines.
- ▶ Before working let the unit cool down.

- During operation, all covers and doors shall be kept closed.
- Use only approved accessories for this device.
- Never touch terminals, busbars or cable ends.

⚠ CAUTION



High sound level during operation !

Hearing damage possible!

- ▶ Wear hearing protection!

NOTICE

Continuous operation (S1) with load > 60 % or from a rated motor power of 55 kW !

Premature ageing of the electrolytic capacitors !

- ▶ Mains choke with $U_k = 4\%$ absolutely necessary.



If a drive controller with electrolytic capacitors in a DC link has not been in operation for more than one year, observe the following instructions.

www.keb.de/fileadmin/media/Techinfo/dr/tn/ti_dr_tn-format-capacitors-00009_en.pdf



Switching at the output

Switching between motor and drive controller is prohibited for single drives during operation as this may trigger the protection gear of the device. Function ‚speed search‘ must be activated if switching can not be avoided. Speed search may only be triggered after closing the motor contactor (e.g. by switching the control release).

Connecting and disconnecting is permissible with multiple motor drives if at least 1 motor is running during the switch-over process. The drive controller must be dimensioned to the occurring starting currents.

The ‚speed search‘ function must be activated if the motor is still running during a restart of the drive controller (mains on) (e.g. due to large rotating masses).

Switching at the input

For applications that require cyclic switching off and on of the drive controller, maintain an off-time of at least 5 min after the last switch on. If you require shorter cycle times please contact KEB Automation KG.

Short-circuit resistance

The drive converters are conditional short-circuit proof. After resetting the internal protection devices, the function as directed is guaranteed.

Exceptions:

- If an earth-leakage fault or short-circuit often occurs at the output, this can lead to a defect in the unit.
- If a short-circuit occurs during regenerative operation (2nd or 4th quadrant, regeneration into the DC link), this can lead to a defect in the unit.

1.6 Maintenance

The following maintenance work has to be carried out when required, but at least once per year by authorized and trained personnel. Check unit for loose screws and plugs and tighten if necessary.

- ▶ Check system for loose screws and plugs and tighten if necessary.
- ▶ Clean drive controller from dirt and dust deposits. Pay attention especially to cooling fins and protective grid of the fans.
- ▶ Examine and clean extracted air filter and cooling air filter of the control cabinet.
- ▶ Check the function of the fans of the drive controller. The fan must be replaced in case of audible vibrations or squeak.
- ▶ In the case of liquid-cooled drive controllers a visual test of the cooling circuit for leaks and corrosion must be carried out. The cooling circuit must be completely empty if a unit shall be switched off for a longer period. The cooling circuit must be blown out additionally with compressed air at temperatures below 0°C.

1.7 Repair

In case of malfunction, unusual noises or smells inform a person in charge!

DANGER



Unauthorized exchange, repair and modifications!

Unpredictable malfunctions!

- ▶ The function of the drive controller is dependent on its parameterization. Never replace without knowledge of the application.
- ▶ Modification or repair is permitted only by KEB Automation KG authorized personnel.
- ▶ Only use original manufacturer parts.
- ▶ Infringement will annul the liability for resulting consequences.

In case of failure, please contact the machine manufacturer. Only the machine manufacturer knows the parameterisation of the used drive controller and can provide an appropriate replacement or induce the maintenance.

1.8 Disposal

Electronic devices of the KEB Automation KG are exclusively professional devices for further industrial processing (so-called B2B devices).

Manufacturers of B2B devices are obliged to take back and recycle devices manufactured after 14.08.2018. These devices may not be disposed at the collection centres of public sector disposal organisations.



If no deviating agreement has been made between the customer and KEB or no deviating mandatory legal regulation exists, KEB products marked in this way can be returned. Company and keyword to the return point can be taken from the list below. Shipping costs are paid by the customer. Thereupon the devices will be professionally recycled and disposed.

The entry numbers are listed country-specific in the following table. The corresponding KEB return addresses can be found on our website.

Withdrawal by	WEEE-Reg.-No.	Keyword
Austria		
KEB Automation GmbH	ERA: 51976	Stichwort „Rücknahme WEEE“
France		
RÉCYLUM - Recycle point	ADEME: FR021806	Mots clés „KEB DEEE“
Germany		
KEB Automation KG	EAR: DE12653519	Stichwort „Rücknahme WEEE“
Italy		
COBAT	AEE: (IT) 19030000011216	Parola chiave „Ritiro RAEE“
Spain		
KEB Automation KG	RII-AEE 7427	Palabra clave „Retirada RAEE“
Česko		
KEB Automation KG	RETELA 09281/20 ECZ	Klíčové slovo: Zpětný odběr OEEZ
Slovakia		
KEB Automation KG	ASEKOL: RV22EEZ0000421	Klíčové slovo: "Spätný odber OEEZ"

The packaging must be feed to paper and cardboard recycling.

2 Product Description

The device series COMBIVERT F6 concerns to drive controllers, which are optimized for operation at synchronous and asynchronous motors.

The COMBIVERT can be extended with a safety module for the use in safety-oriented applications. The COMBIVERT F6 series are drive converters with functional safety, optimized for operation at synchronous and asynchronous motors.

Various safety functions are available for different applications. It can be operated with a fieldbus module at different fieldbus systems. The control board has a system comprehensive operating concept.

The COMBIVERT complies with the requirements of the Machinery Directive. The possible functions are certified via a type test.

The COMBIVERT is a product of limited availability in accordance with [EN 61800-3](#). This product may cause radio interference in residential areas. In this case the operator may need to take corresponding measures.

The Machinery Directive, EMC Directive, Low Voltage Directive and other directives and regulations must be observed

2.1 Specified application

The COMBIVERT serves exclusively for the control and regulation of three-phase motors. It is intended for the installation into electrical systems or machines in the industrie.

Technical data and information for connection conditions shall be taken from the nameplate and from the instructions for use and must be strictly observed.

The used semiconductors and components of the KEB Automation KG are developed and dimensioned for the use in industrial products.

Restriction

If the product is used in machines, which work under exceptional conditions or if essential functions, life-supporting measures or an extraordinary safety step must be fulfilled, the necessary reliability and security must be ensured by the machine builder.

2.1.1 Residual risks

Despite intended use, the drive converter can reach unexpected operating conditions in case of error, with wrong parameterization, by faulty connection or unprofessional interventions and repairs. This can be:

- wrong direction of rotation
- motor speed too high
- motor is running into limitation
- motor can be under voltage even in standstill
- automatic start

2.2 Unintended use

The operation of other electric consumers is prohibited and can lead to the destruction of the devices. The operation of our products outside the indicated limit values of the technical data leads to the loss of any liability claims.

2.3 Product features

These instructions for use describes the power unit of the following device:

Device type:	Drive controller
Series:	COMBIVERT F6
Power range:	7.5...15 kW / 400 V
Housing:	2 Peak Power

The COMBIVERT F6 is characterized by the following features:

- Operation of three-phase asynchronous motors and three-phase synchronous motors, in operating modes open-loop or closed-loop with and without speed feedback
- Following fieldbus systems are supported:
EtherCAT, VARAN, PROFINET, POWERLINK or CAN
- System-overlapping operating concept
- Wide operating temperature range
- Low switching losses by IGBT power unit
- Low noise development due to high switching frequencies
- Different heat sink concepts
- Temperature-controlled fan, easily replaceable
- Torque limits and s-curves are adjustable to protect gearboxes
- General protection functions of the COMBIVERT series against overcurrent, over-voltage, ground fault and overtemperature
- Analog inputs and outputs, digital inputs and outputs, relay output (potential-free), brake control and -supply, motor protection by I²t, KTY- or PTC input, two encoder interfaces, diagnostic interface, fieldbus interface (depending on the control board)
- Integrated safety function according to [EN 61800-5-2](#)

2.4 Part code

x	x	F 6	x	x	x	-	x	x	x	x
Heat sink version										1: Air-cooler, mounted version
										2: Liquid cooler (water), mounted version
										3: Air-cooler, through-mount version IP54-ready
										4: Liquid cooler (water), through-mount version IP54-ready
										5: Air-cooler, through-mount version IP20
										6: Liquid cooler (water), trough-mount version IP54-ready, sub-mounted braking resistors
										7: Liquid cooler (oil), through-mount version IP54-ready
										8: Liquid cooler (oil), through-mount version IP54-ready, sub-mounted braking resistors
										9: Liquid cooler (water), mounted version, sub-mounted braking resistors
										A: Liquid cooler (water), mounted version, High Performance, sub-mounted braking resistors
										B: Liquid cooler (water), through-mount version, IP54-ready, High Performance, sub-mounted braking resistors
										C: Air-cooler, mounted version, Version 2
										D: Air-cooler, mounted version, High-Performance
										E: Liquid cooler (water), mounted version, High-Performance
										F: Air-cooler, through-mount version IP54-ready, High-Performance
										G: Liquid cooler (water), trough-mount version IP54-ready, High-Performance
										H: Air-cooler,, Convektion, trough-mount version IP54-ready
Control board variant										APPLIKATION
										1: Multi Encoder Interface, CAN ^{® 2)} , Real-Time Ethernet-busmodule ³⁾
										B Multi Encoder Interface, CAN ^{® 2)} , Real-Time Ethernet-busmodule ³⁾ , Alternative connector
										KOMPAKT
										1: Multi Encoder Interface, CAN ^{® 2)} , STO, EtherCAT ^{® 1)}
										2: Multi Encoder Interface, CAN ^{® 2)} , STO, VARAN
										PRO
										0: No Encoder, CAN ^{® 2)} , Real-Time Ethernetinterface ³⁾
										1: Multi Encoder Interface, CAN ^{® 2)} , Real-Time Ethernet interface ³⁾
										3: Multi Encoder Interface, CAN ^{® 2)} , Real-Time Ethernet interface ³⁾ , RS485-potential free
										4: No Encoder, CAN ^{® 2)} , Real-Time Ethernetinterface ³⁾ , safe relay
										5: Multi Encoder Interface, CAN ^{® 2)} , Real-Time Ethernet interface ³⁾ , safety relay
										B: Multi Encoder Interface, CAN ^{® 2)} , Real-Time Ethernet interface ³⁾ , alternative connector

continued on the next page

continued on the next page

x x	F 6	x	x	x	-x	x	x	x
Switching frequency, Software current limit, Turn-off current							0: 2 kHz / 125% / 150%	8: 2 kHz / 180% / 216%
							1: 4 kHz / 125% / 150%	9: 4 kHz / 180% / 216%
							2: 8 kHz / 125% / 150%	A: 8 kHz / 180% / 216%
							3: 16 kHz / 125% / 150%	B: 8 kHz / HSD
							4: 2 kHz / 150% / 180%	C: 6 kHz / HSD
							5: 4 kHz / 150% / 180%	Non standard switching
							6: 8 kHz / 150% / 180%	D: frequency / Overload characteristic
							7: 16 kHz / 150% / 180%	E: Special Device
Voltage / Connection type							1: 3ph 230 V AC/DC with braking transistor	
							2: 3ph 230 V AC/DC without braking transistor	
							3: 3ph 400 V AC/DC with braking transistor	
							4: 3ph 400 V AC/DC without braking transistor	
							A: 3ph 400 V AC/DC incl. GTR7 / max. rectifier / max. pre-charging	
							B: 3ph 400 V AC/DC without GTR7 / max. rectifier / max. pre-charging	
							C: 3ph 400 V AC/DC. GTR7-variant 2	
							D: 3ph 400 V AC/DC GTR7-variant 2 / max. rectifier / max. pre-charging	
Housing							2...9	
Equipment							1: Safety module type 1/STO at control type K	
							3: Safety module type 3	
							4: Safety module type 4	
							5: Safety module type 5	
Control type							A: APPLICATION	
							K: COMPACT	
							P: PRO	
Series							COMBIVERT F6	
Inverter size							10...33	


Table 1: Part code

- ¹⁾  EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany
- ²⁾  CANopen® is registered trademark of CAN in AUTOMATION - International Users and Manufacturers Group e.V.
- ³⁾ The Real-Time Ethernetbusmodul / Real-Time Ethernet interface contains various fieldbus control types which can be adjusted by software (parameter fb68)



The part code may not be used as order code, but only for identification !

2.5 Nameplate

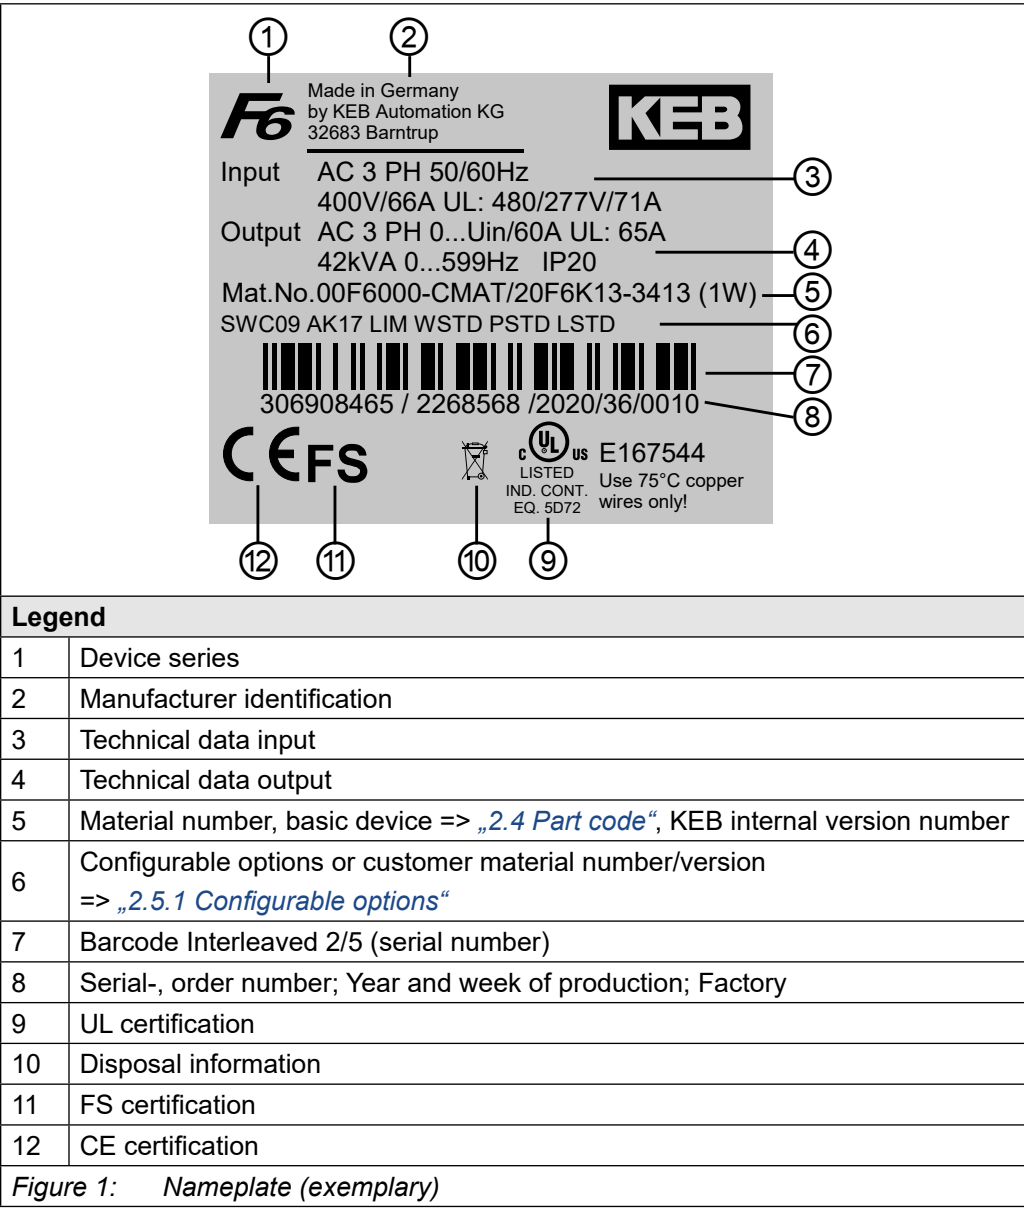

2.5.1 Configurable options

Features	Feature values	Description
Software	SWxxx ¹⁾	Software status of the drive converter
Accessories	Axxx ¹⁾	Selected accessories
	NAK	No accessories
Output frequency activation	LIM	Limitation to 599 Hz
	ULO	> 599 Hz activated
Warranty	WSTD	Warranty - Standard
	Wxxx ¹⁾	Warranty extension
Parameterization	PSTD	Parameterization - Standard
	Pxxx ¹⁾	Parameterization - Customer-specific
Nameplate logo	LSTD	Logo - Standard
	Lxxx ¹⁾	Logo - Customer-specific
<i>Figure 2: Configurable options</i>		

¹⁾ „x“ indicates a variable value

3 Technical data

Unless otherwise indicated, all electrical data in the following chapter refer to a 3-phase AC mains.

3.1 Operating conditions

3.1.1 Climatic environmental conditions

Storage		Standard	Class	Descriptions
Ambient temperature		EN 60721-3-1	1K4	-25...55 °C
Relative humidity		EN 60721-3-1	1K3	5...95 % (without condensation)
Storage height		—	—	Max. 3000 m above sea level
Transport		Standard	Class	Descriptions
Ambient temperature		EN 60721-3-2	2K3	-25...70 °C
Relative humidity		EN 60721-3-2	2K3	95 % at 40 °C (without condensation)
Operation		Standard	Class	Descriptions
Ambient temperature		EN 60721-3-3	3K3	5...40 °C (extended to -10...45 °C)
Coolant inlet temperature	Air	—	—	5...40 °C (extended to -10...45 °C)
Relative humidity		EN 60721-3-3	3K3	5...85 % (without condensation)
Version and degree of protection		EN 60529	IP20	Protection against foreign material > ø12.5 mm No protection against water Non-conductive pollution, occasional condensation when PDS is out of service. Drive controller generally, except power connections and fan unit (IPxxA)
Site altitude		—	—	Max. 2000 m above sea level • With site altitudes over 1000 m a derating of 1 % per 100 m must be taken into consideration. • With site altitudes over 2000 m, the control board to the mains has only basic isolation. Additional measures must be taken when wiring the control.

Table 2: Climatic environmental conditions

3.1.2 Mechanical environmental conditions

Storage	Standard	Class	Descriptions
Vibration limits	EN 60721-3-1	1M2	Vibration amplitude 1.5 mm (2...9 Hz) Acceleration amplitude 5 m/s ² (9...200 Hz)
Shock limit values	EN 60721-3-1	1M2	40 m/s ² ; 22 ms
Transport	Standard	Class	Descriptions
Vibration limits	EN 60721-3-2	2M1	Vibration amplitude 3.5 mm (2...9 Hz) Acceleration amplitude 10 m/s ² (9...200 Hz)
Shock limit values	EN 60721-3-2	2M1	100 m/s ² ; 11 ms
Operation	Standard	Class	Descriptions
Vibration limits	EN 60721-3-3	3M4	Vibration amplitude 3.0 mm (2...9 Hz) Acceleration amplitude 10 m/s ² (9...200 Hz)
	EN 61800-5-1	–	Vibration amplitude 0.075 mm (10...58 Hz) Acceleration amplitude 10 m/s ² (58...150 Hz)
Shock limit values	EN 60721-3-3	3M4	100 m/s ² ; 11 ms

Table 3: Mechanical environmental conditions

3.1.3 Further environmental operating conditions

Operation	Standard	Class	Descriptions
Chemically active substances	EN 60721-3-3	3C2	No salt spray
Mechanically active substances		3S2	–
Organic		3B1	–
UV resistance		–	No requirement

Table 4: Further environmental operating conditions

OPERATING CONDITIONS

3.1.4 Electrical operating conditions

3.1.4.1 Device classification

Requirement	Standard	Class	Descriptions
Overtoltage category	EN 61800-5-1	III	–
Pollution degree	EN 61800-5-1	2	Non-conductive pollution, occasional condensation when PDS is out of service.

Table 5: Device classification

3.1.4.2 Electromagnetic compatibility

For devices without an internal filter, an external filter is required to comply with the following limits.

EMC emitted interference	Standard	Class	Descriptions
Conducted interference emission	EN 61800-3	C2 / C3	The specified value is only maintained in connection with a filter. Information on interference suppression (rated switching frequency, max. motor cable length) can be found in the corresponding filter instructions.
Radiated emitted interference	EN 61800-3	C2	–
EMF	EN 61800-5-1	–	Table P.2
Immunity	Standard	Level	Descriptions
Static discharges	EN 61000-4-2	8 kV 4 kV	AD (air discharge) CD (contact discharge)
Burst - Ports for process measurement control lines and signal interfaces	EN 61000-4-4	2 kV	–
Burst - AC - Power ports	EN 61000-4-4	4 kV	–
Surge - Power ports	EN 61000-4-5	1 kV 2 kV	Phase-phase Phase-ground
Conducted immunity, induced by high-frequency fields	EN 61000-4-6	10 V	0.15...80 MHz
Electromagnetic fields	EN 61000-4-3	10 V/m 3 V/m 1 V/m	80 MHz...1 GHz 1.4...2 GHz 2...2.7 GHz
voltage dips	EN 61000-4-11 EN 61000-4-34	Class 3	–
frequency fluctuations	EN 61000-4-28	± 2 %	–
Voltage unbalances	EN 61000-2-4	≤ 3 %	–

Table 6: Electromagnetic compatibility

3.2 Device data of the Peak Power devices

3.2.1 Overview of the Peak Power devices

The technical data are for 2/4-pole standard motors. With other pole numbers the drive controller must be dimensioned onto the rated motor current. Contact KEB for special or medium frequency motors.

Device size		14	15	16
Housing		2		
Rated apparent output power	S_{out} / kVA	11,4	16,6	22,9
Max. rated motor power	¹⁾ P_{mot} / kW	7,5	11	15
Rated input voltage	U_N / V	400 (UL: 480 / 277)		
Input voltage range	U_{in} / V	280...550		
Mains phases		3		
Mains frequency	f_N / Hz	50 / 60 $\pm$ 2		
Rated input current @ $U_N = 400$ V	I_{in} / A	21	31	43
Rated input current @ $U_N = 480$ V	I_{in_UL} / A	18	27	35
Insulation resistance @ $U_{dc} = 500$ V	R_{iso} / M Ω	> 20		
Output voltage	U_{out} / V	0... U_{in}		
Output frequency	²⁾ f_{out} / Hz	0...599		
Output phases		3		
Rated output current @ $U_N = 400$ V	I_N / A	16,5	24	33
Rated output current @ $U_N = 480$ V	I_{N_UL} / A	14	21	27
Rated output overload (60 s)	^{3) 4)} I_{60s} / %	180	180	150
Software current limit	³⁾ I_{lim} / %	200	200	190
Overcurrent	³⁾ I_{OC} / %	240	240	230
Rated switching frequency	f_{SN} / kHz	8	8	4
Max. switching frequency	⁵⁾ f_{S_max} / kHz	16	16	8
Power dissipation at rated operation	¹⁾ P_D / W	231 (S1 operation)	331 (S1 operation)	336
Overload current over time	³⁾ I_{OL} / %	=> „3.2.3.1 Overload characteristic (OL) for Peak Power devices“		
Maximum current 0Hz/50Hz at $f_S = 2$ kHz	I_{out_max} / %	240 / 240	175 / 240	127 / 230
Maximum current 0Hz/50Hz at $f_S = 4$ kHz	I_{out_max} / %	200 / 240	138 / 240	100 / 230
Maximum current 0Hz/50Hz at $f_S = 8$ kHz	I_{out_max} / %	182 / 240	125 / 240	73 / 218
Maximum current 0Hz/50Hz at $f_S = 16$ kHz	I_{out_max} / %	115 / 240	79 / 171	-
continued on the next page				

DEVICE DATA OF THE PEAK POWER DEVICES

Device size		14	15	16
Housing		2		
Max. braking current	I_{B_max} / A	33,6	33,6	46,7
Min. braking resistor value	R_{B_min} / Ω	25	25	18
Braking transistor	⁶⁾	Max. cycle time: 120 s; Max c.d.f.: 50 %		
Protection function for braking transistor		No protection function available		
Max. motor cable length shielded	⁷⁾ // m	100		
Table 7: Overview of the Peak Power device data				

- ¹⁾ Rated operation corresponds to $U_N = 400V$, rated switching frequency, output frequency = 50 Hz (4-pole standard asynchronous motor).
- ²⁾ The output frequency is to be limited in such a way that it does not exceed 1/10 of the switching frequency. Notice! Devices with a maximum output frequency higher than 599Hz are restricted for export
- ³⁾ The values refer in % to the rated output current I_N .
- ⁴⁾ Observe limitations „3.2.3.1 Overload characteristic (OL) for Peak Power devices“.
- ⁵⁾ A detailed description of the derating „3.3.1.1 Switching frequency and temperature of the Peak Power devices“.
- ⁶⁾ The cyclic duration factor is additionally limited by the used braking resistor.
- ⁷⁾ The maximum cable length depends on various factors. Further information can be found in the corresponding filter instructions.

3.2.2 Voltage and frequencies for 400V devices

Input voltages and frequencies		
Rated input voltage	U_N / V	400
Rated mains voltage (USA)	U_{N_UL} / V	480
Input voltage range	U_{IN} / V	280...550
Input phases		3
Mains frequency	f_N / Hz	50/60
Mains frequency tolerance	$\pm f_N / Hz$	2
Table 8: Input voltages and frequencies of the 400V devices		

DC link voltage		
DC link rated voltage @ $U_N = 400V$	U_{N_dc} / V	565
DC link rated voltage @ $U_{N_UL} = 480V$	$U_{N_UL_dc} / V$	680
DC link voltage working voltage range	U_{IN_dc} / V	390...780
Table 9: DC link voltage for 400V devices		

Output voltages and frequencies		
Output voltage at AC supply	¹⁾ U_{out} / V	$0 \dots U_{N_ac}$
Output frequency	²⁾ f_{out} / Hz	$0 \dots 599$
Output phase		3
Table 10: Output voltages and frequencies of the 400V devices		

- ¹⁾ The voltage to the motor is dependent on the actual input voltage and the control method („3.2.2.1 Example of the calculation of the possible motor voltage:“).
- ²⁾ The output frequency is to be limited in such a way that it does not exceed 1/10 of the switching frequency. Devices with a maximum output frequency higher than 599Hz are restricted for export.

3.2.2.1 Example of the calculation of the possible motor voltage:

The motor voltage for dimensioning of the drive is depending on the used components.
The motor voltage reduces according to the following table:

Component	Reduction / %	Example
Mains choke U_k	4	<i>Open-loop drive converter with mains- and motor choke at non-rigid supply system: 400 V mains voltage (100%) - 36 V reduced voltage (11 %) = 356 V motor voltage</i>
Drive converter open-loop	4	
Drive converter closed-loop	8	
Motor choke U_k	1	
Non-rigid supply system	2	
Table 11: <i>Example of the calculation of the possible motor voltage:</i>		

3.2.3 Input and output currents / overload for Peak Power devices

Device size		14	15	16
Rated input current @ $U_N = 400V$	¹⁾ I_{in} / A	21	31	43
Rated input current @ $U_{N_UL} = 480V$	¹⁾ I_{in_UL} / A	18	27	35
Rated input current DC @ $U_N = 565V$	I_{in_dc} / A	26	38	52
Rated input current DC @ $U_{N_UL} = 680V$	$I_{in_UL_dc} / A$	22	33	43
Rated output current @ $U_N = 400V$	I_N / A	16,5	24	33
Rated output current @ $U_{N_UL} = 480V$	I_{N_UL} / A	14	21	27
Rated output overload (60 s)	²⁾ $I_{60s} / \%$			150
Overload current	²⁾ $I_{OL} / \%$	„3.2.3.1 Overload characteristic (OL) for Peak Power devices“		
Software current limit	^{2) 3)} $I_{lim} / \%$	180	180	190
Overcurrent	²⁾ $I_{OC} / \%$	240	240	230
Table 12: Input and output currents / overload of Peak Power devices				

- ¹⁾ The values resulting from rated operation with B6 rectifier circuit and mains choke 4% U_k .
- ²⁾ The values refer in % to the rated output current I_N .
- ³⁾ Limitation of the current setpoint in closed-loop operation. This setpoint limit is not active in v/f operation.

3.2.3.1 Overload characteristic (OL) for Peak Power devices


All drive controllers can be operated at rated switching frequency with an utilisation of 150 % for 60s.


The OL overload function is a root mean square (RMS) function. The greater the difference between the overload and underload phases, the greater the deviation of the RMS from the arithmetic mean value.

For extreme overloads ($\Rightarrow$ „Figure 3: Switch-off time t depending on the overload I/I_N at OC level 230 %“ the load is weighted more heavily. This means the load is provided with a factor for the calculation of the RMS value, by way that the overload protection function triggers, even if the RMS value does not reach 100%.

Restrictions:

- The thermal design of the heat sink is based on the rated operation. The following values are taken into account: Rated output current, ambient temperature, rated switching frequency, rated voltage.
- At high ambient temperatures and/or high heat sink temperatures (for example, by preceding utilisation nearby 100%) the drive controller can change to overtemperature error before triggering the protective function OL.
- At low output frequencies or switching frequencies higher than the rated switching frequency, the frequency-dependent maximum current can be exceeded before triggering the overload error OL and error OL2 can be triggered ($\Rightarrow$ „3.2.3.2 Frequency-dependent maximum current (OL2) for Peak Power devices“).

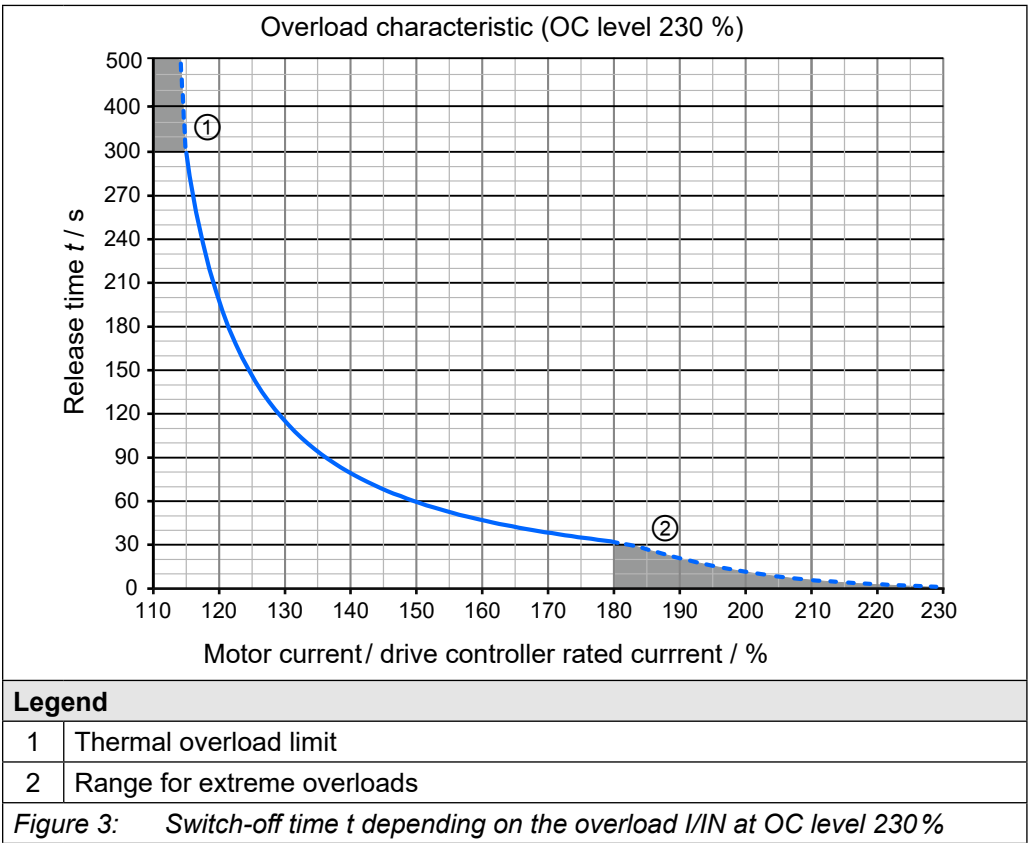

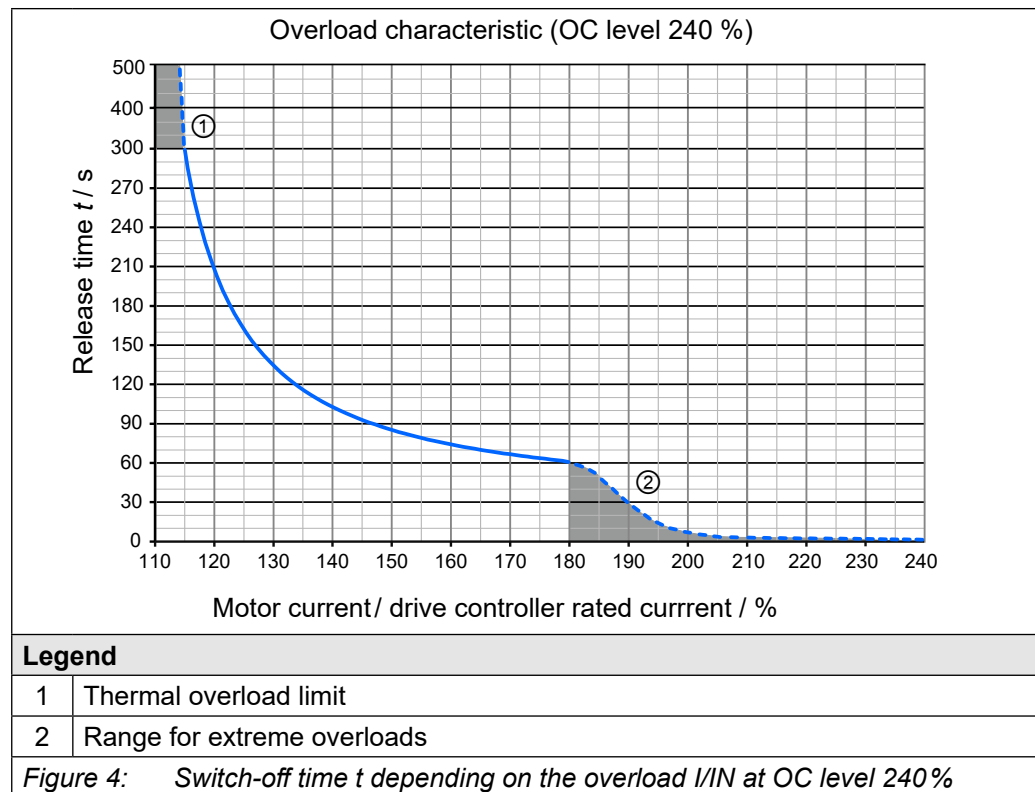

- On exceeding a load of 105 % the overload integrator starts.
- When falling below the integrator counts backwards.
- If the integrator achieves the overload characteristic "ERROR overload (OL)" is triggered.

After a cooling down period, the integrator can be reset now. The drive controller must remain switched on during the cooling down phase.

Operation in the range of the thermal overload limit

Due to the high steepness of the overload characteristic, the duration of a permissible overload in this range ① cannot be determined exactly. Therefore, the design of the drive controller should be assumed to have a maximum overload time of 300s.

3.2.3.2 Frequency-dependent maximum current (OL2) for Peak Power devices

The characteristics of the maximum currents for a switching frequency which are depending on the output frequency are different for each drive controller, but the following rules are generally applicable:

- Applies for the rated switching frequency: at 0 Hz the drive controller can provide at least the rated output current and from 6 Hz the overcurrent I_{oc} .
- Lower maximum currents apply for switching frequencies > rated switching frequency.

If error (OL2) shall be triggered on exceeding the maximum currents or if the switching frequency is automatically reduced "derating" can be adjusted in the drive controller parameters.

The following characteristic curve indicates the permissible maximum current for the output frequency values 0 Hz, 3.1 Hz, 6.2 Hz, 12.5 Hz, 25 Hz and 50 Hz. Device size 16 is represented exemplary.

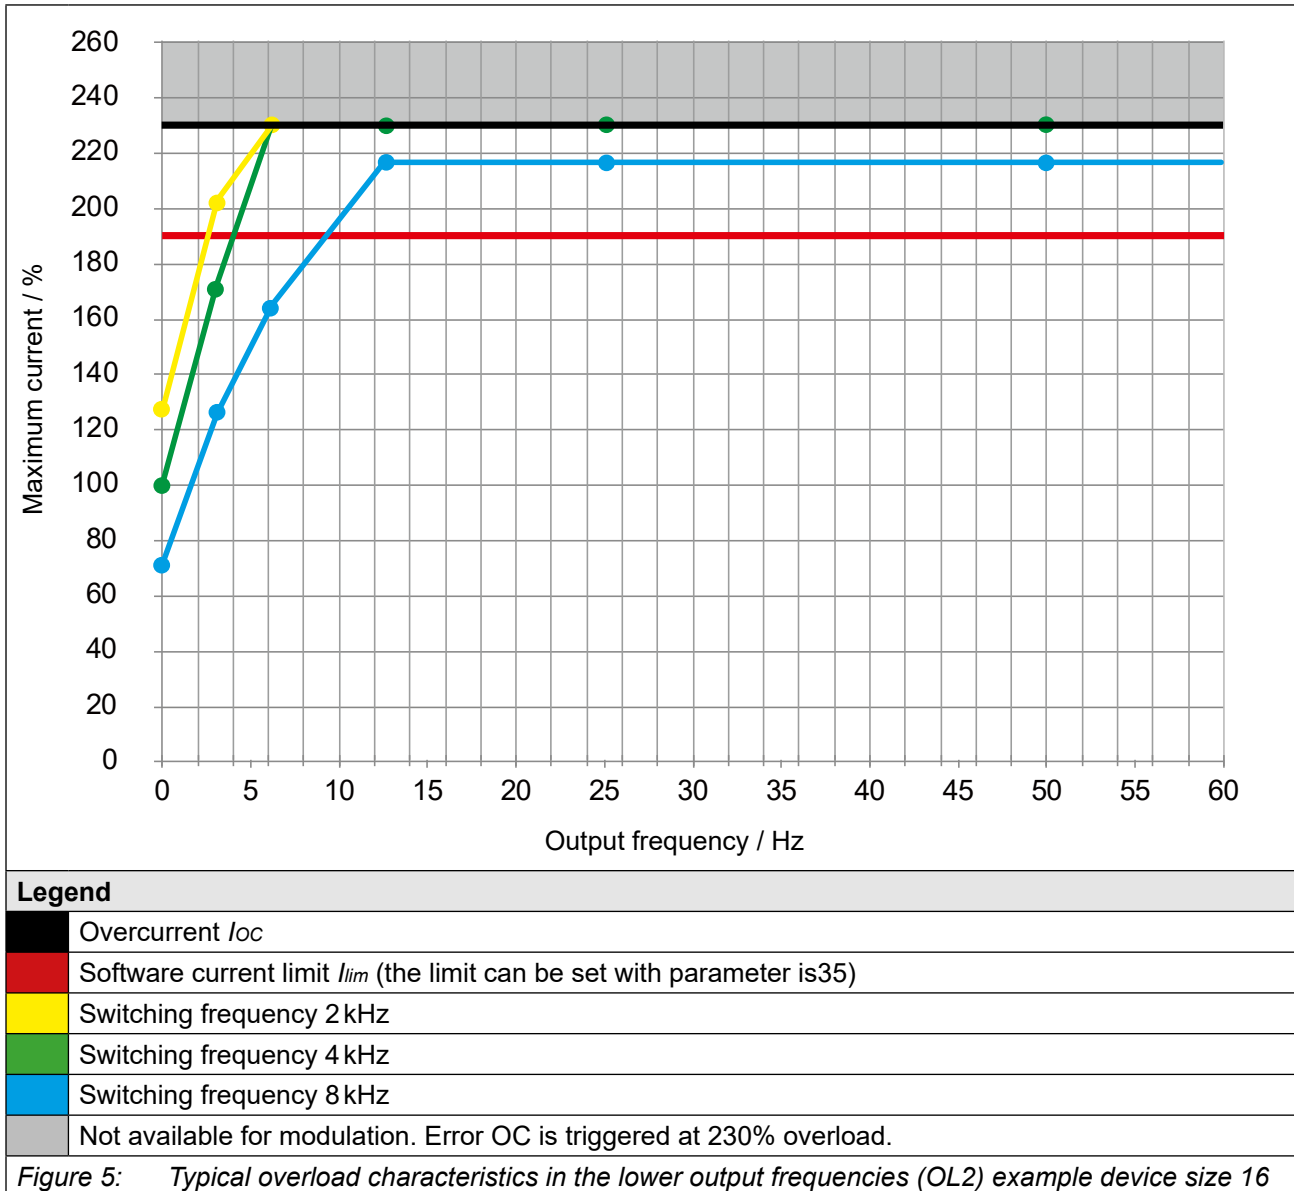


Figure 5: Typical overload characteristics in the lower output frequencies (OL2) example device size 16



The frequency-dependent maximum current I_{out_max} refers in % to the rated output current I_N .

The current remains constant from the last specified output frequency value.



The values for the respective device size are listed in the following tables.

Frequency-dependent maximum current

Device size		14					
Rated switching frequency		8 kHz					
Output frequency	f_{out} / Hz	0	3,1	6,2	12,5	25	50
Frequency-dependent maximum current @ f_s $I_{out_max} / \%$ <i>Basic Time Period = 62.5 μs (Parameter is22=0)</i>	2 kHz	240	240	240	240	240	240
	4 kHz	200	240	240	240	240	240
	8 kHz	182	240	240	240	240	240
	16 kHz	115	176	218	236	240	240
Frequency-dependent maximum current @ f_s $I_{out_max} / \%$ <i>Basic Time Period = 71.4 μs (Parameter is22=1)</i>	1.75 kHz	240	240	240	240	240	240
	3.5 kHz	214	240	240	240	240	240
	7 kHz	186	240	240	240	240	240
	14 kHz	130	197	240	240	240	240
Frequency-dependent maximum current @ f_s $I_{out_max} / \%$ <i>Basic Time Period = 83.3 μs (Parameter is22=2)</i>	1.5 kHz	240	240	240	240	240	240
	3 kHz	227	240	240	240	240	240
	6 kHz	191	240	240	240	240	240
	12 kHz	146	218	240	240	240	240
Frequency-dependent maximum current @ f_s $I_{out_max} / \%$ <i>Basic Time Period = 100 μs (Parameter is22=3)</i>	1.25 kHz	240	240	240	240	240	240
	2.5 kHz	240	240	240	240	240	240
	5 kHz	196	240	240	240	240	240
	10 kHz	164	240	240	240	240	240

Table 13: Frequency-dependent maximum current for device size 14

Device size		15					
Rated switching frequency		8 kHz					
Output frequency	f_{out} / Hz	0	3	6	12,5	25	50
Frequency-dependent maximum current @ f_s I_{out_max} / % <i>Basic Time Period = 62.5 μs (Parameter is22=0)</i>	2 kHz	175	240	240	240	240	240
	4 kHz	138	225	240	240	240	240
	8 kHz	125	188	229	240	240	240
	16 kHz	79	121	150	163	167	171
Frequency-dependent maximum current @ f_s I_{out_max} / % <i>Basic Time Period = 71.4 μs (Parameter is22=1)</i>	1.75 kHz	175	240	240	240	240	240
	3.5 kHz	147	230	240	240	240	240
	7 kHz	128	197	240	240	240	240
	14 kHz	90	135	167	177	183	190
Frequency-dependent maximum current @ f_s I_{out_max} / % <i>Basic Time Period = 83.3 μs (Parameter is22=2)</i>	1.5 kHz	175	240	240	240	240	240
	3 kHz	156	235	240	240	240	240
	6 kHz	131	206	240	240	240	240
	12 kHz	100	150	183	192	200	208
Frequency-dependent maximum current @ f_s I_{out_max} / % <i>Basic Time Period = 100 μs (Parameter is22=3)</i>	1.25 kHz	175	240	240	240	240	240
	2.5 kHz	166	240	240	240	240	240
	5 kHz	134	216	240	240	240	240
	10 kHz	113	169	206	221	229	238

Table 14: Frequency-dependent maximum current for device size 15

Device size		16					
Rated switching frequency		4 kHz					
Output frequency	f_{out} / Hz	0	3,1	6,2	12,5	25	50
Frequency-dependent maximum current @ f_s I_{out_max} / % <i>Basic Time Period = 62.5 μs (Parameter is22=0)</i>	2 kHz	127	203	230	230	230	230
	4 kHz	100	173	230	230	230	230
	8 kHz	73	127	167	218	218	218
Frequency-dependent maximum current @ f_s I_{out_max} / % <i>Basic Time Period = 71.4 μs (Parameter is22=1)</i>	1.75 kHz	127	203	230	230	230	230
	3.5 kHz	107	180	230	230	230	230
	7 kHz	80	139	183	222	222	222
Frequency-dependent maximum current @ f_s I_{out_max} / % <i>Basic Time Period = 83.3 μs (Parameter is22=2)</i>	1.5 kHz	127	203	230	230	230	230
	3 kHz	114	188	230	230	230	230
	6 kHz	86	150	200	226	226	226
Frequency-dependent maximum current @ f_s I_{out_max} / % <i>Basic Time Period = 100 μs (Parameter is22=3)</i>	1.25 kHz	127	203	230	230	230	230
	2.5 kHz	121	196	230	230	230	230
	5 kHz	93	161	217	230	230	230

Table 15: Frequency-dependent maximum current for device size 16

3.2.4 Overview of rectifier data for 400 V devices

Device size		14	15	16
Rectifier rated power	P_{rect} / kW	8,7	13	17
Rectifier continuous power	¹⁾ $P_{rect_cont} / \text{kW}$	17	17	17
Continuous input current @ $U_N = 400 \text{ V}$	¹⁾ I_{in_cont} / A	43	43	43
Input continuous current @ $U_{N_UL} = 480 \text{ V} / 277 \text{ V}$	¹⁾ $I_{in_UL_cont} / \text{A}$	35	35	35
Rated output current DC @ $U_{N_dc} = 565 \text{ V}$	I_{out_dc} / A	26	38	52
Continuous output current DC @ $U_{N_dc} = 565 \text{ V}$	¹⁾ $I_{out_dc_cont} / \text{A}$	52	52	52
Rated output current DC @ $U_{N_UL_dc} = 680 \text{ V}$	$I_{out_UL_dc} / \text{A}$	22	33	43
Continuous output current DC @ $U_{N_UL_dc} = 680 \text{ V}$	¹⁾ $I_{out_UL_dc_cont} / \text{A}$	43	43	43

Table 16: Overview of rectifier data for 400 V devices

¹⁾ Continuous operation is a load that exceeds the rated operation. Continuous operation only occurs if the internal rectifier is used to supply additional drive controllers via the DC terminals => „5.3.6 DC-bus connection“. In continuous operation, the OH error can be triggered depending on the operating conditions of the internal inverter.

3.2.5 Power dissipation at rated operation of the 400V devices

Device size		14	15	16
Rated switching frequency	f_{SN} / kHz	8	8	4
Power dissipation at rated operation	¹⁾ P_D / W	231 (S1 operation)	331 (S1 operation)	336
Power dissipation at rated operation DC	²⁾ P_{D_dc} / W	218	298	301

Table 17: Power dissipation of the Peak Power devices

¹⁾ Rated operation corresponds to $U_N = 400 \text{ V}$; f_{SN} ; I_N ; $f_N = 50 \text{ Hz}$ (typically value)

²⁾ Rated operation DC corresponds to $U_{N_dc} = 565 \text{ V}$; I_N

3.2.6 Fuse protection of the drive controllers of the Peak Power devices

3.2.6.1 Protection of peak power devices with AC supply

Device size	Max. size of the fuse / A			
	$U_N = 400\text{ V}$ gG (IEC)	$U_N = 480\text{ V} /$ 277 V class „J“	$U_N = 480\text{ V} / 277\text{ V}$ ^{1) 2)}	
	SCCR 30 kA	SCCR 5 kA	SCCR 30 kA	Type
14	25	25	25	SIBA 50 1xy 06.40 COOPER BUSSMANN 170M1xy3 LITTELFUSE L50S040
15	35	30	40	SIBA 50 1xy 06.40 COOPER BUSSMANN 170M1xy3 LITTELFUSE L50S040
16	50	50	50	SIBA 50 1xy 06.50 COOPER BUSSMANN 170M1xy4 LITTELFUSE L50S050

Table 18: Fusing of the Peak Power devices

¹⁾ Only fuses within the described model range or series may be used.

²⁾ "x" stands for various indicators. "y" stands for different connection variants. "#" stands for the amperage or identification number.



Short-circuit capacity

According to requirements from [EN 61439-1](#) and [EN 61800-5-1](#), the following applies to connection to a mains supply: The devices are suitable for use in a circuit capable of delivering not more than 30 kA eff. unaffected symmetrical short-circuit current.

3.2.6.2 Protection fusing of 400 V devices with DC supply

Device size	Recommended size of the fuse / A		Permissible fuses ¹⁾
	$U_{N_dc} = 565V$	$U_{N_UL_dc} = 680V$	
	SCCR 30 kA	SCCR 30 kA	
14	40	35	SIBA 50 215 06.20 SIBA 50 204 34.25 SIBA 50 118 06.30 SIBA 50 120 06.32 SIBA 50 201 06.63 SIBA 50 250 06.80 ²⁾ SIBA 50 280 06.100 SIBA 20 209 37.100 ²⁾ SIBA 50 268 06.125 SIBA 20 556 34.160 Bussmann FWP-50A14F Bussmann FWP-100A22F Bussmann 170M1419 Littelfuse L70QS150
15	63	50	
16	80	70	

Table 19: DC Fusing of the 400 V / 480 V devices

¹⁾ Fuses of the same type with lower rated currents can be used if they are suitable for the application.

²⁾ Fuse without UL certification.

NOTICE

Observe the rated voltage of the fuse!

- The rated voltage of the fuse must be at least equal to the maximum DC supply voltage of the drive controller.

3.2.6.3 Motor protective circuit-breaker / circuit breaker

Device size	Recommended motor-protective circuit-breakers / circuit-breakers						
	IEC ($U_N = 400\text{ V}$)			UL ($U_{N_UL} = 480\text{ V}$)			
	Type	Rated current / A	SCCR @ U_N / kA	Type	Rated current / A	Rated power / hp	SCCR @ U_{N_UL} / kA
14	Eaton PKZM0-25	25	18	Eaton PKZM0-20	20	–	18
15	Eaton PKZM0-32	32	18	Eaton PKZM0-32	32	20	18
16	Eaton PKZM4-50	50	30	Eaton PKZM4-40	40	30	30

Table 20: Recommended motor protective circuit-breakers / circuit breakers for 400 V / 480 V appliances

Alternative motor-protective circuit-breaker / circuit-breaker			
IEC ($U_N = 400\text{ V}$), UL ($U_{N_UL} = 480\text{ V}$)			
Type	Rated current / A	Rated power / hp	SCCR @ U_N / kA
Eaton PKZM0-16	16	10	30
Eaton PKZM0-32	32	20	18
Eaton PKZM4-50	50	30	30
Siemens 3RV2011-4AA10	16	10	30
Siemens 3RV2021-4EA10	32	20	30
Siemens 3RV2032-4VA10	45	60	30
Schneider GV2P22	25	15	10
Schneider GV3P50	50	30	30

Table 21: Alternative motor protective circuit-breakers / circuit breaker for 400 V / 480 V appliances

This chapter lists the recommended and alternative motor protection switches/circuit breakers for protecting the drive converter. The selection of the recommended protection switches is based on continuous operation (S1 operation) at 100% load and maximum ambient temperature. If operating conditions differ, the circuit breakers must be dimensioned accordingly (see manufacturer's documentation for the respective circuit breakers).



IEC only:

Motor-protective circuit-breakers / circuit-breakers not listed here can be used provided they fulfil the following requirements:

- Passage integral I^2t @ $U_N < 200\text{ kA}^2\text{s}$
- Forward current I_p @ $U_N < 13\text{ kA}$

3.3 General electrical data

3.3.1 Switching frequency and temperature

The drive controller cooling is designed by way that the heat sink overtemperature threshold is not exceeded at rated conditions. A switching frequency higher than the rated switching frequency also produces higher losses and thus a higher heat sink heating. If the heat sink temperature reaches a critical threshold (T_{DR}), the switching frequency can be reduced automatically step by step. This prevents that the drive controller switches off due to overheating of the heat sink. If the heat sink temperature falls below the threshold T_{UR} , the switching frequency is increased back to the setpoint. At temperature T_{EM} the switching frequency is immediately reduced to rated switching frequency. „Derating“ must be activated, for this function to work.

3.3.1.1 Switching frequency and temperature of the Peak Power devices


Device size		14	15	16
Rated switching frequency	¹⁾ f_{SN} / kHz	8	8	4
Max. switching frequency	¹⁾ f_{S_max} / kHz	16	16	8
Min. switching frequency	¹⁾ f_{S_min} / kHz	1,25	1,25	1,25
Max. heat sink temperature	T_{HS} / °C	90	90	95
Temperature for derating the switching frequency	T_{DR} / °C	80	80	80
Temperature for uprating the switching frequency	T_{UR} / °C	70	70	70
Temperature for switching to rated switching frequency	T_{EM} / °C	85	85	85
Table 22: Switching frequency and temperature of the Peak Power devices				

¹⁾ The output frequency is to be limited in such a way that it does not exceed 1/10 of the switching frequency.

3.3.2 DC link / braking transistor function

NOTICE**Falling below the minimum braking resistor value !****Destruction of the drive controller**

► The minimum brake resistance value must not fall below!

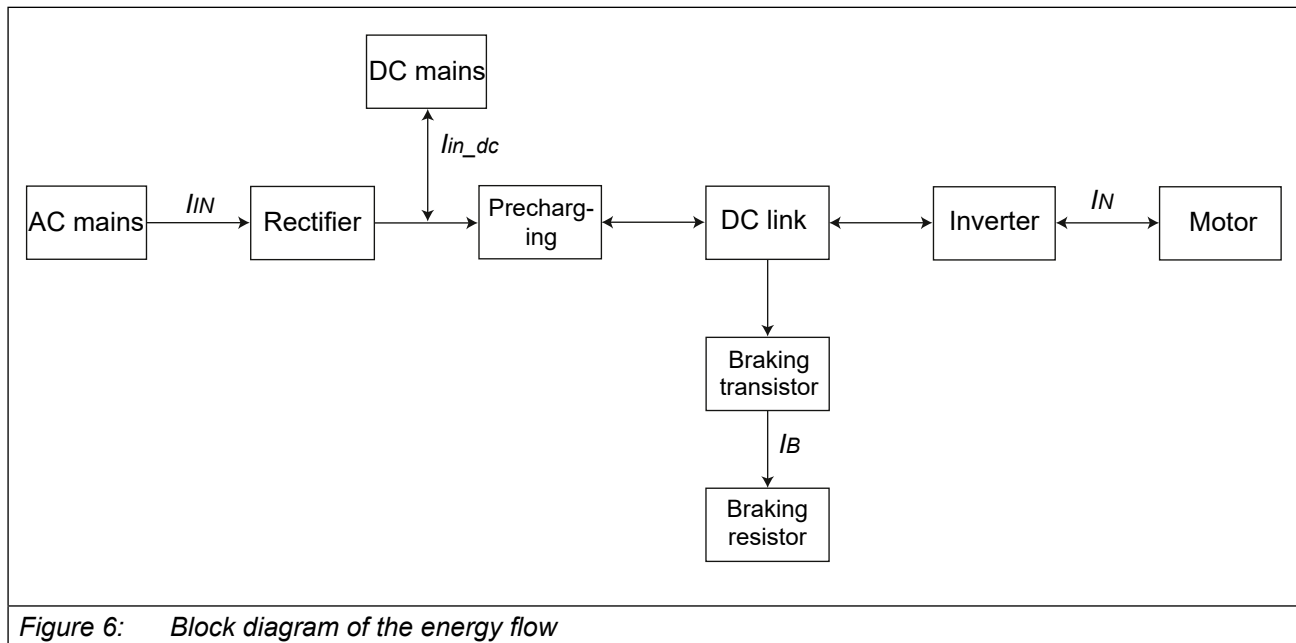

GENERAL ELECTRICAL DATA

3.3.2.1 DC link / braking transistor function of the Peak Power devices

Device size		14	15	16
Rated DC link voltage @ $U_N = 400\text{ V}$	U_{N_dc} / V	565		
Rated DC link voltage @ $U_{N_UL} = 480\text{ V} / 277\text{ V}$	$U_{N_dc_UL} / \text{V}$	680		
DC link voltage working voltage range	U_{IN_dc} / V	390...780		
DC switch-off level "Error underpotential"	U_{UP} / V	240		
DC switch-off level "Error overpotential"	U_{OP} / V	840		
DC switch-off level braking resistor ¹⁾	U_B / V	780		
Max. braking current	I_{B_max} / A	33,6	33,6	46,7
Min. braking resistor value	R_{B_min} / Ω	25	25	18
Braking transistor ²⁾		Max. cycle time: 120 s; c.d.f.: 50 %		
Protection function for braking transistor		No protection function available		
DC link capacity	$C_{int} / \mu\text{F}$	820	1230	1230
Min. internal precharge resistor	R_{pc_int} / Ω	12	12	12
Max. precharge current	I_{pc_max} / A	200	200	200

Table 23: DC link / braking transistor function of the Peak Power devices

¹⁾ The DC switching level for the braking transistor is adjustable. The default value is the value specified in the table.

²⁾ The cyclic duration factor is additionally limited by the used braking resistor.

3.3.3 Fan

Device size		14	15	16
Interior fan	Number	1		
	Speed-variable	no		
Heat sink fan	Number	2		
	Speed-variable	no		
Table 24: Fan				



The fans are not speed-variable.


NOTICE

Destruction of the fan!

- Take care that no foreign substances drop into the fan!

3.3.3.1 Switching behaviour of the fans

The fans have different switch-on and switch-off points. The switching point for the switch-on temperature ① is adjustable. The hysteresis for the switch-off temperature ② cannot be changed. The switching behaviour of the fans depends on the heat sink and interior temperature.

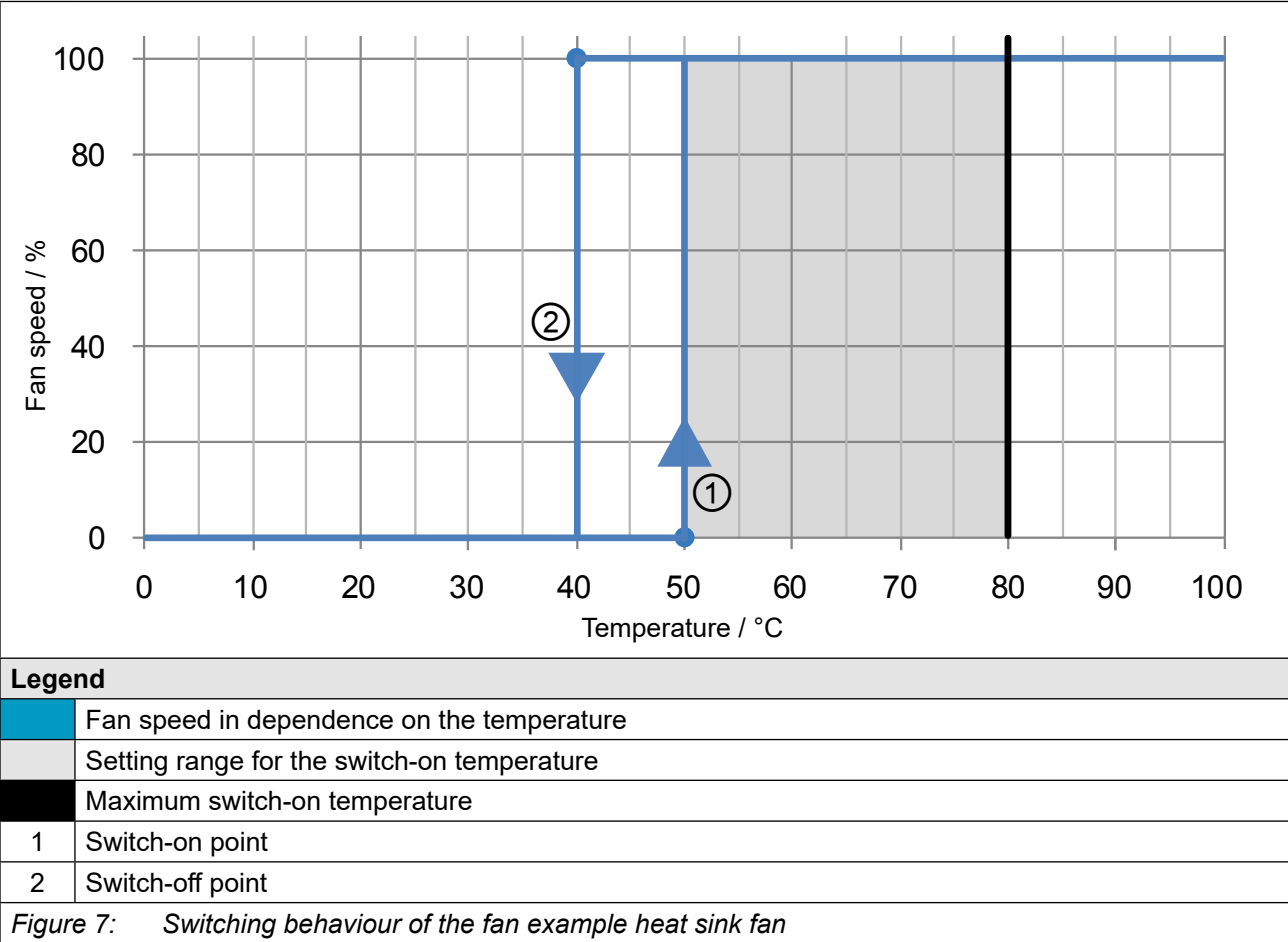

3.3.3.2 Switching points of the fans

The switching point for the switch-on temperature and the maximum speed level of the fans are adjustable. The following table shows the default values.


Fan		Heat sink	Interior
Switch-on temperature	$T / ^\circ\text{C}$	50	45
Maximum switch-on temperature	$T / ^\circ\text{C}$	80	55

Table 25: Switching points of the fans


4 Installation

4.1 Dimensions and weights


4.1.1 Built-in version air cooler

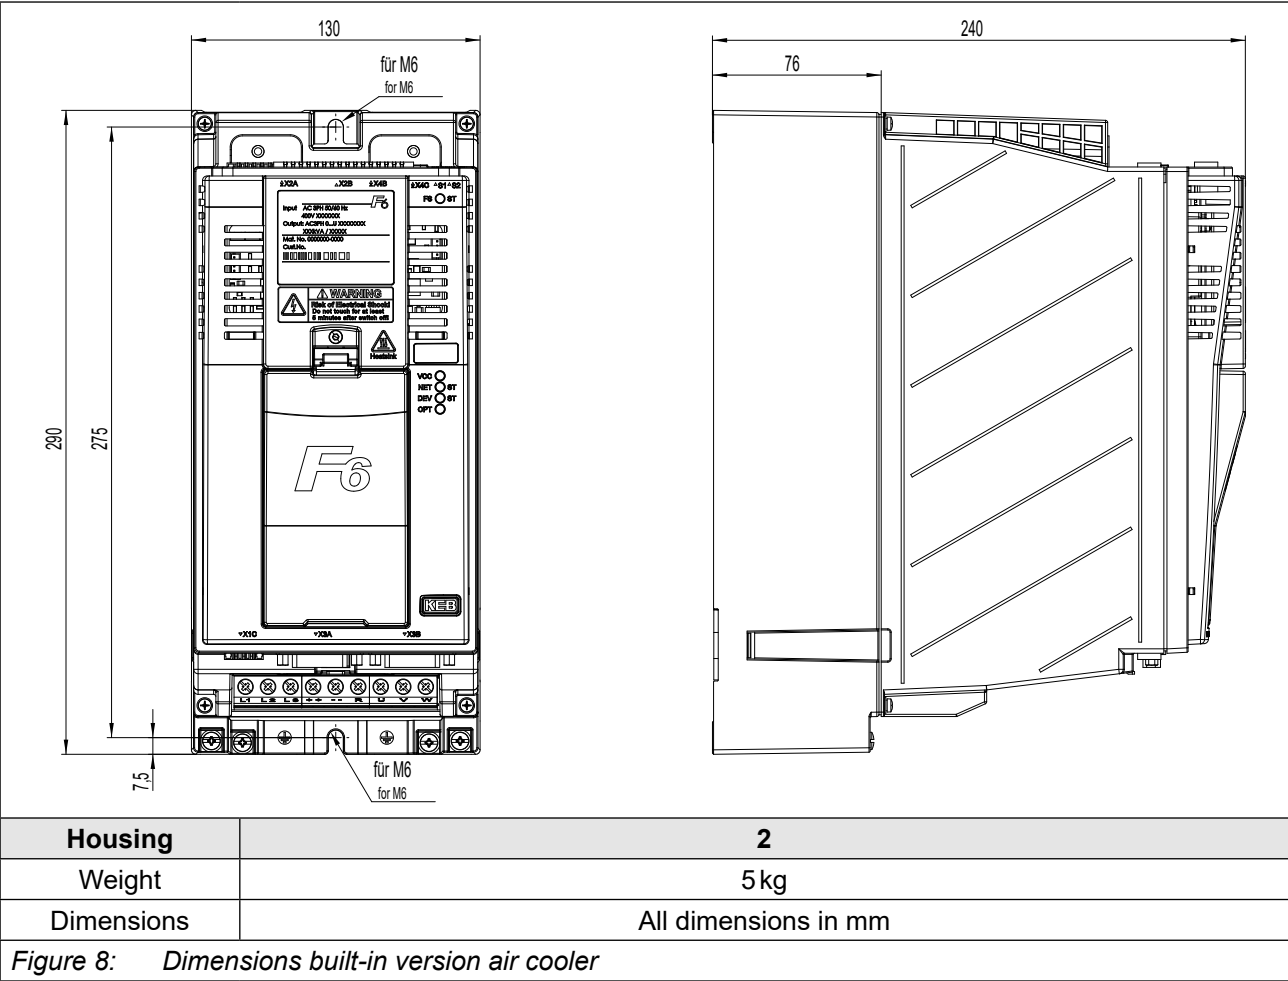

4.1.2 Push-through version air cooler IP20-ready

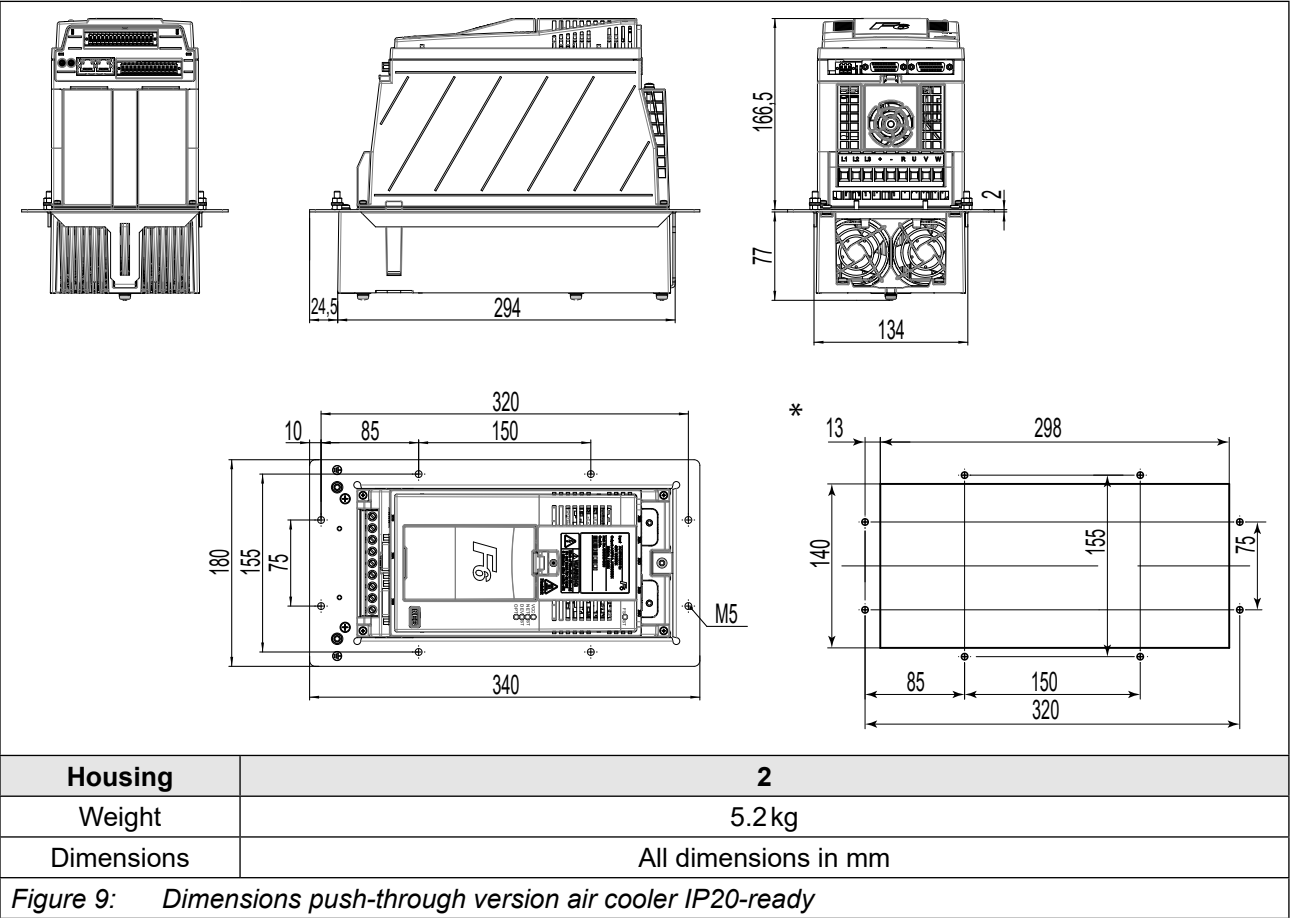

4.1.3 Push-through version air-cooling IP54-ready

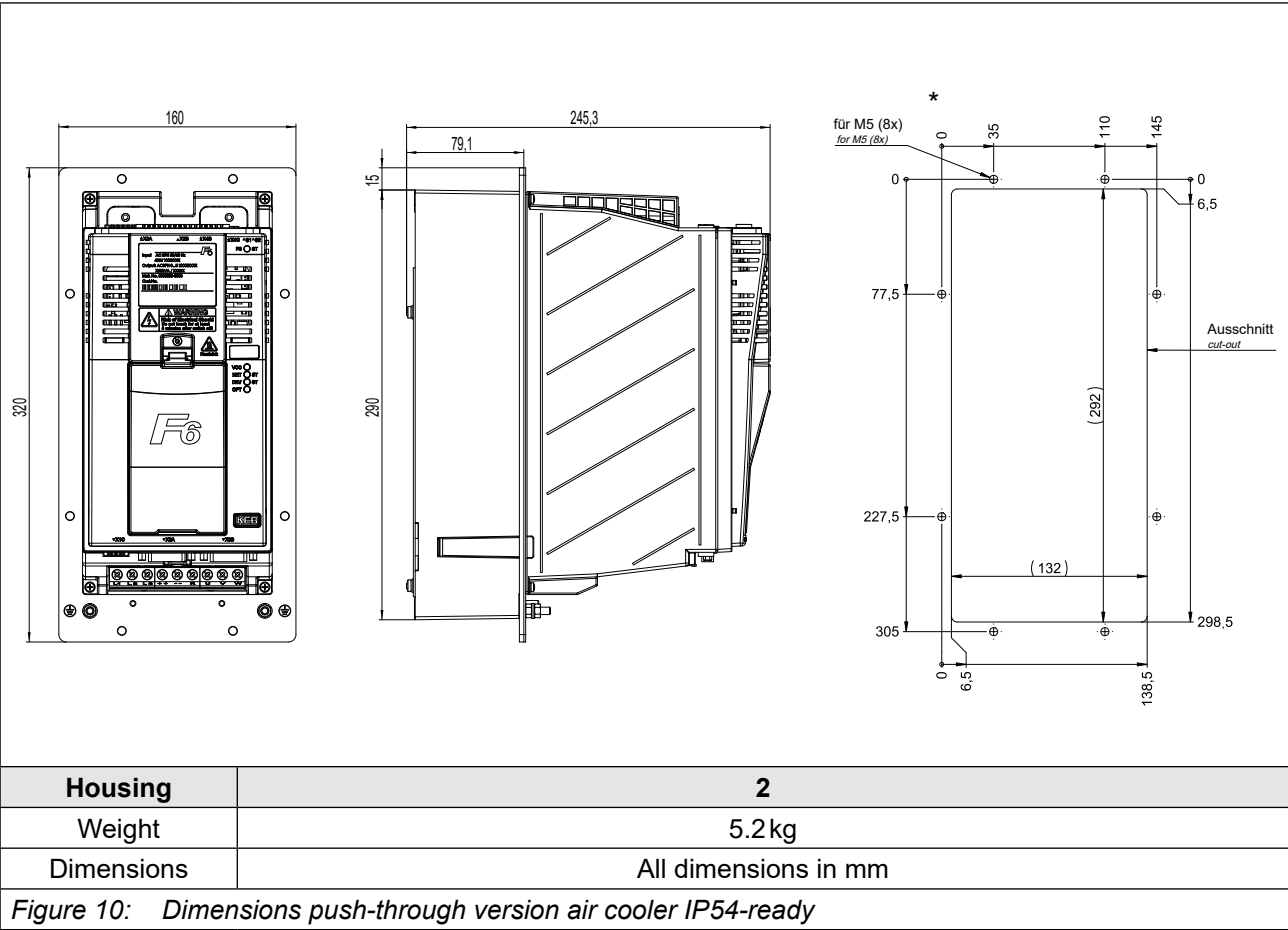

4.2 Control cabinet installation

4.2.1 Mounting instructions

For the mounting of the drive controllers the following mounting materials with the corresponding quality were tested by KEB.

Required material	Tightening torque
Socket screw <i>ISO 4762</i> - M6 - 8.8	6.5 Nm 58lb inch
Flat washer <i>ISO 7092</i> - 6 - 200 HV	—
<i>Table 26: Mounting instructions for built-in version</i>	

Required material	Tightening torque
Socket screw <i>ISO 4762</i> - M5 - 8.8	2.5 Nm 22lb inch
Flat washer <i>ISO 7092</i> - 5 - 200 HV	—
<i>Table 27: Mounting instructions for push-through version</i>	

NOTICE

Use of other fixing material

- The alternatively selected fixing material must meet the above material characteristics (quality) and tightening torques!

The use of other fixing materials is beyond the control of KEB and is therefore the sole responsibility of the customer.

4.2.2 Mounting distances

Power dissipation for the control cabinet dimension => „3.2.5 Power dissipation at rated operation of the 400V devices“. A lower value can be used here depending on the operating mode/load.




Mounting the drive controller

For reliable operation, the drive controller must be mounted without any distance on a smooth, closed, metallically bright mounting plate.

Mounting distances	Dimension	Distance in mm	Distance in inch
	A	150	6
	B	100	4
	C	30	1,2
	D	0	0
	E	0	0
	F ¹⁾	50	2
	¹⁾ Distance to preceding elements in the control cabinet door.		

Figure 11: Mounting distances

4.2.3 Installation of IP54-ready devices

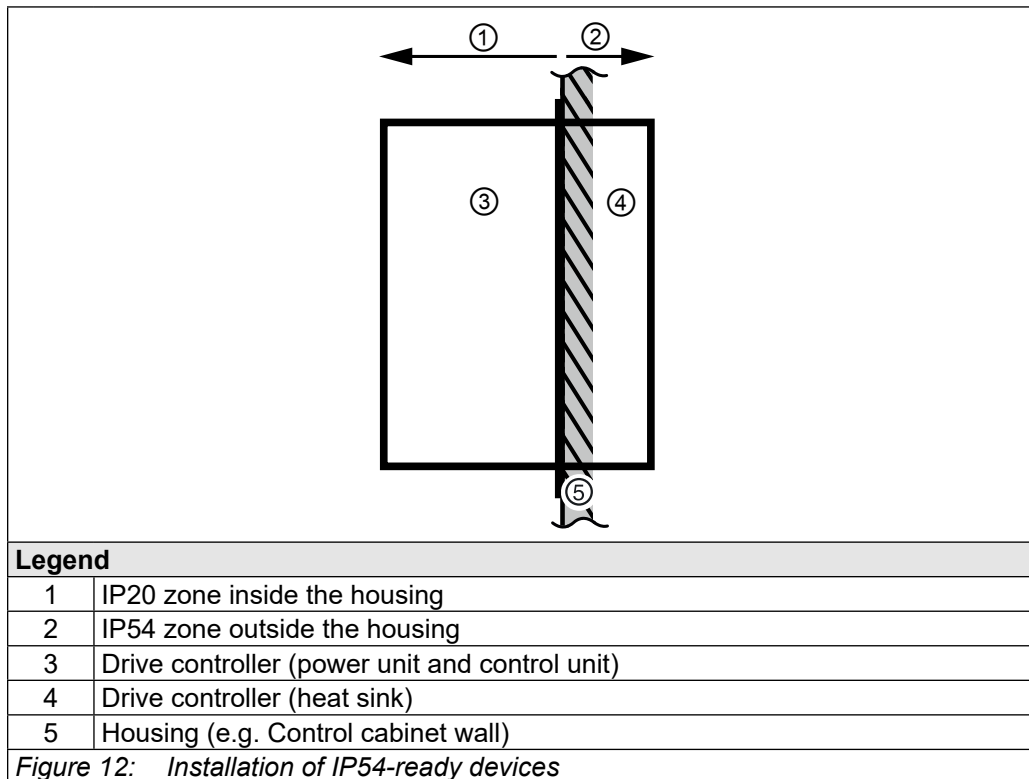

IP54 zone: Heat sink outside the housing

The protection class IP54 can only be achieved when the device is properly installed.

For proper installation, a suitable IP54 seal
(=> „5.4.3 Seal for IP54-ready devices“) must be installed between heat sink and housing (e.g. control cabinet wall).

The tightness must be checked after the installation. If properly installed, the separation to the housing corresponds to degree of protection IP54.

In the case of fan-cooled units, the fans must be protected from negative environmental influences.

These include combustible, oily or dangerous fumes or gases, corrosive chemicals, coarse foreign bodies and excessive dust. This applies especially to the access of the heatsink from the top (air outlet). Icing is inadmissible.

UL: Device heat sink is classified as NEMA type 1

IP20 zone: Device inside the housing

This part is intended for the installation in a suitable housing for the required degree of protection (e.g. control cabinet).

The power connections are excluded => „3.1.1 Climatic environmental conditions“.


NOTICE

Defect due to continuous splash water !


- Never expose the device to continuous splashing water (e.g. direct exposure to rain)!

4.2.4 Control cabinet ventilation

If construction-conditioned the control cabinet cannot be without indoor ventilation, appropriate filters must avoid suction of foreign objects.

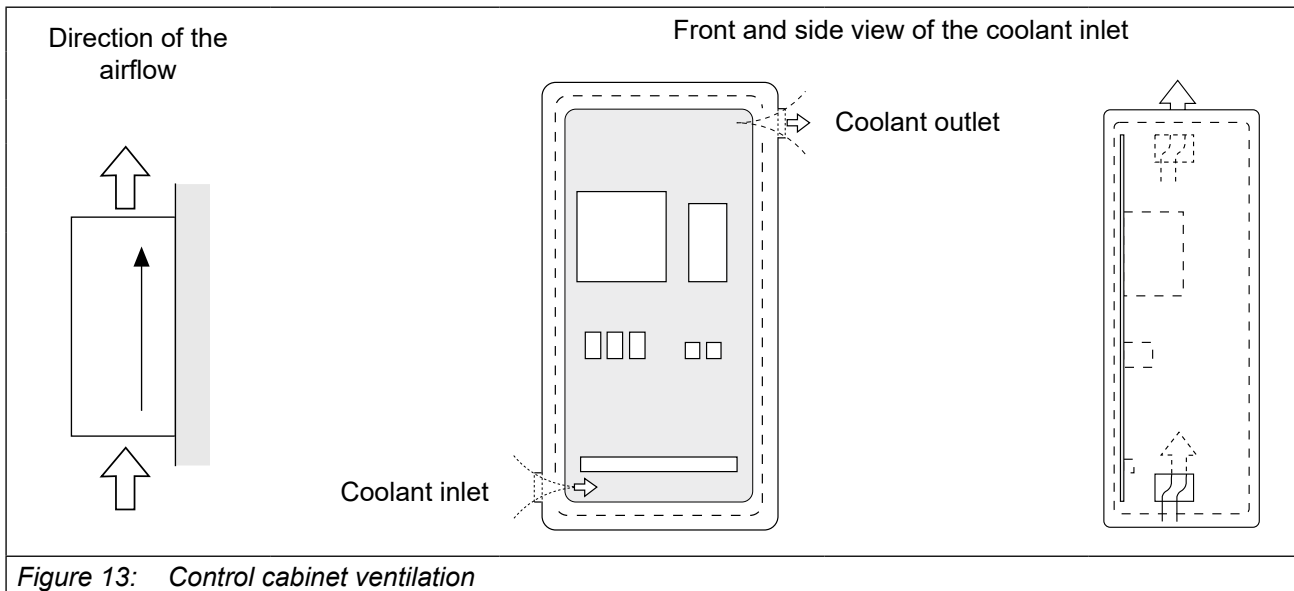

4.2.5 Airflow of the drive converter

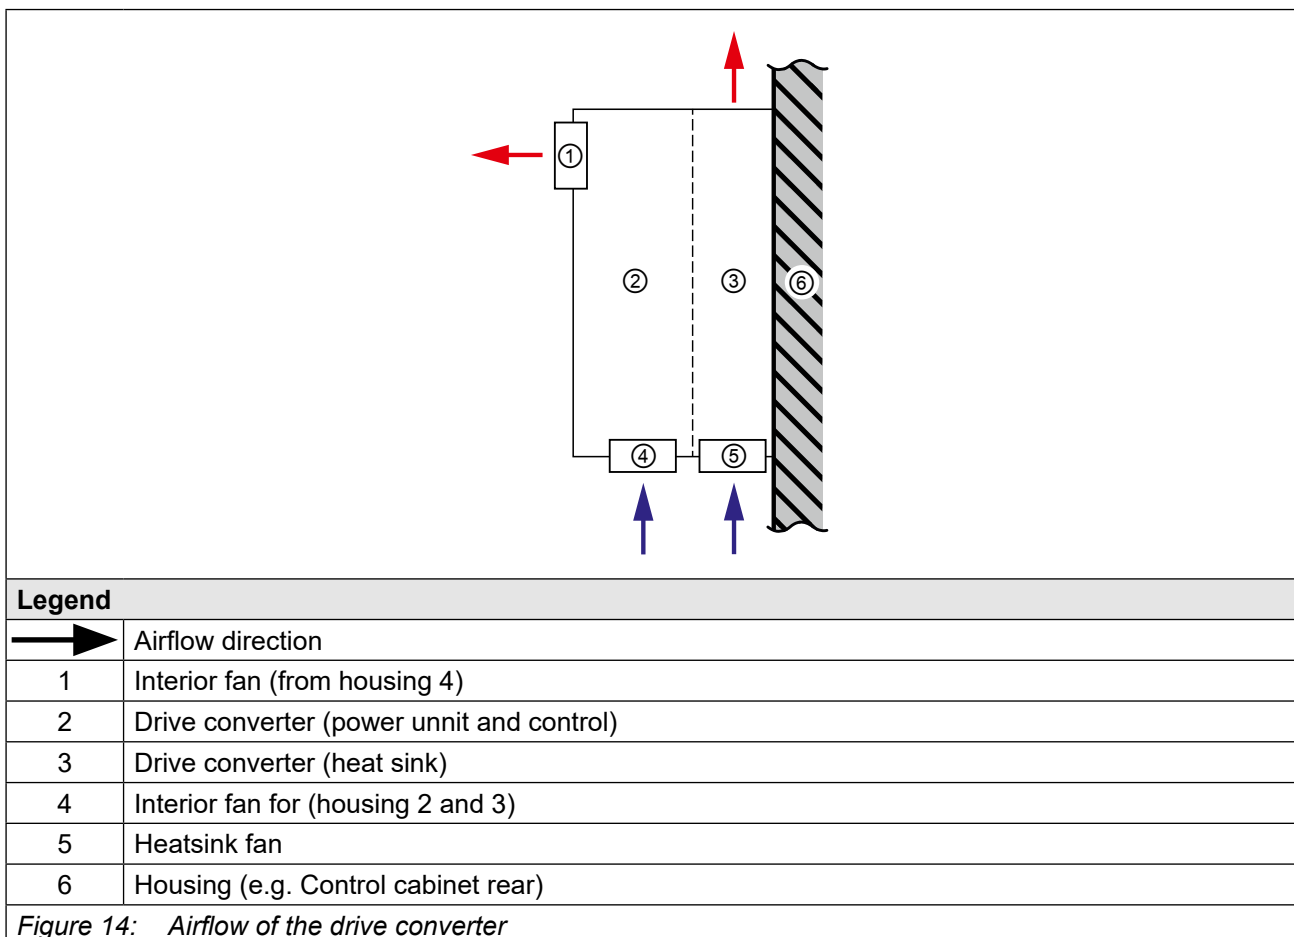

5 Installation and connection

5.1 Overview of the COMBIVERT F6

Housing 2	No.	Name	Description
	1 / 6a	---	Fixing points for the optional shielding plates. The shielding e.g. from the motor cable is laid on the mounting plate in the control cabinet or on the shield connection bracket (optionally available). Control unit: 00F6V80-2000 Power unit: - Built-in version 00F6V80-2001 - Push-through version 00F6V80-2002
	2	---	LEDs (=> manual for control unit chapter "Overview") For control board COMPACT: FS without function. - For control board COMPACT: FS without function - For control card APPLICATION and PRO: Status indication of the safety module
	3	---	Nameplates
	4	X4A	Diagnostic interface with RS232/485 interface according to DIN 66019II protocol / operator slot
	5	X1A	Power circuit terminals for: - Mains input - Braking resistor - DC supply - Motor connection
	6	PE	Protective earth; at connection to protective earth each terminal may be assigned only once.

Figure 15: F6 housing 2 top view


Housing 2		No.	Name	Description
		5	X1A	Power circuit terminals for: • Mains input • Braking resistor • DC supply • Motor connection
		6	PE	Protective earth; when connecting the protective earth, each terminal may be assigned only once.
		6a	---	Fixing points for the optional shielding plates. The shielding e.g. from the motor cable is laid on the mounting plate in the control cabinet or on the shielding plates (optionally available). Power unit: • Built-in version 00F6V80-2001 • Push-through version 00F6V80-2002
		7	X3A	Encoder interface channel A
		8	X3B	Encoder interface channel B
		9	X1C	Terminal for: • Motor temperature monitoring • Brake control
		10	---	Interior fan
		11	---	Heat sink fan

Figure 16: F6 housing 2 front view

Housing 2		No.	Name	Description
	12	S1	Rotary coding switch A	
	13	S2	Rotary coding switch B	
	14	X4C	Fieldbus interface (out)	
	15	X4B	Fieldbus interface (in)	
	16	X2B	Safety module	
	17	X2A	Connection for: • CAN bus • Analog inputs and analog output • Digital inputs and outputs • 24 V DC voltage supply	

Figure 17: F6 housing 2 rear view with control board APPLICATION

Figure 17: F6 housing 2 rear view with control board APPLICATION

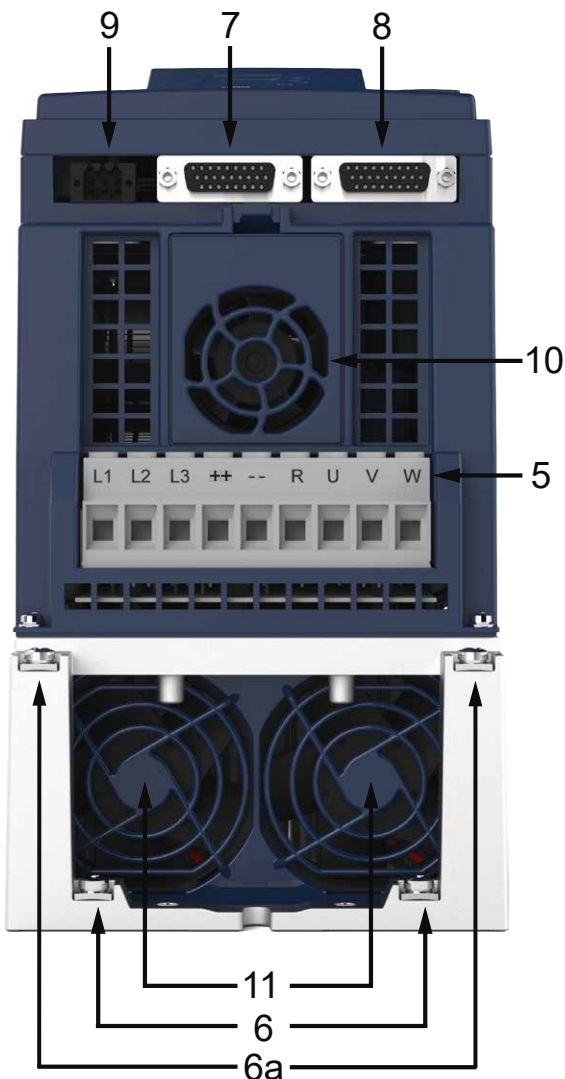

Further information can be found in the respective control board manual.



Instructions for use COMBIVERT F6 control board APPLICATION
www.keb.de/fileadmin/media/Manuals/dr/ma_dr_f6-cu-a-inst-20118593_en.pdf



Instructions for use COMBIVERT F6 control board COMPACT
www.keb.de/fileadmin/media/Manuals/dr/ma_dr_f6-cu-k-inst-20144795_en.pdf



Instructions for use COMBIVERT F6 control board PRO
www.keb.de/fileadmin/media/Manuals/dr/ma_dr_f6-cu-p-inst-20182705_en.pdf



5.2 Connection of the power unit

NOTICE

Destruction of the drive controller!

- Never exchange mains input and motor output!

5.2.1 Connection of the voltage supply

The COMBIVERT F6 housing 2 can be supplied from the mains. The starting current limiting is arranged before the DC link.

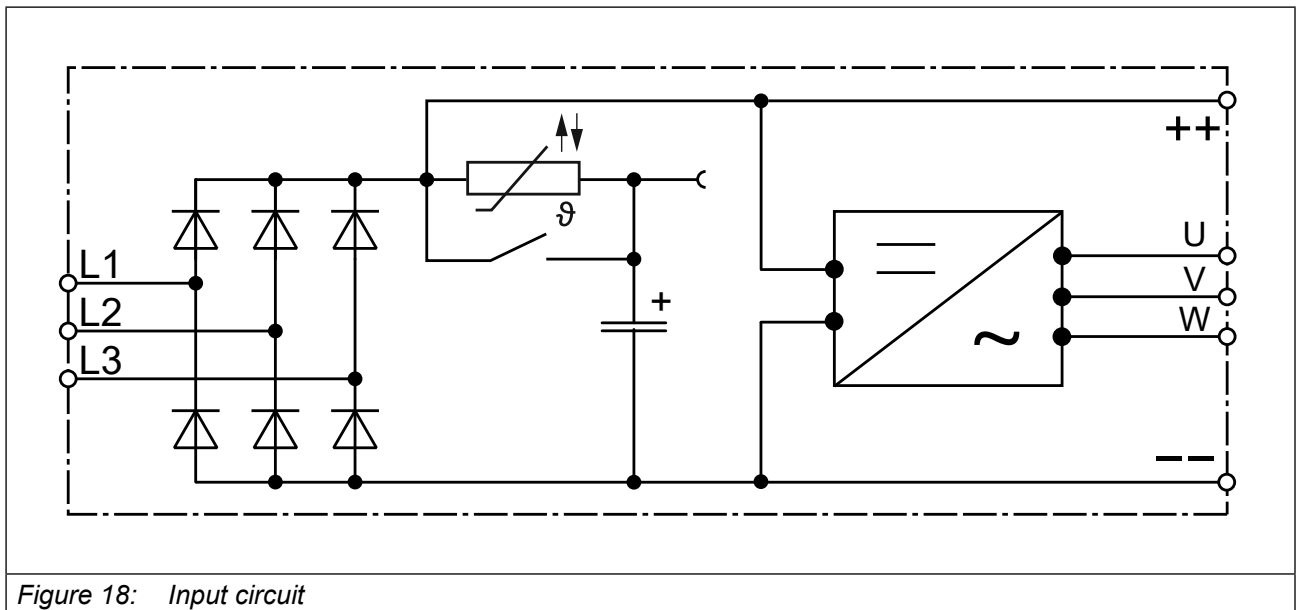



Figure 18: Input circuit



Minimum waiting period between two switch-on procedures 5 minutes!


ZCyclic switching on and off of the device leads to temporary low resistance of the resistor (NTC) in the input. This causes a higher starting current, which causes stress to the components in the input range (e.g. the input rectifier) and can lead to triggering of the mains fuse.

5.2.1.1 Terminal block X1A device size 14 and 15

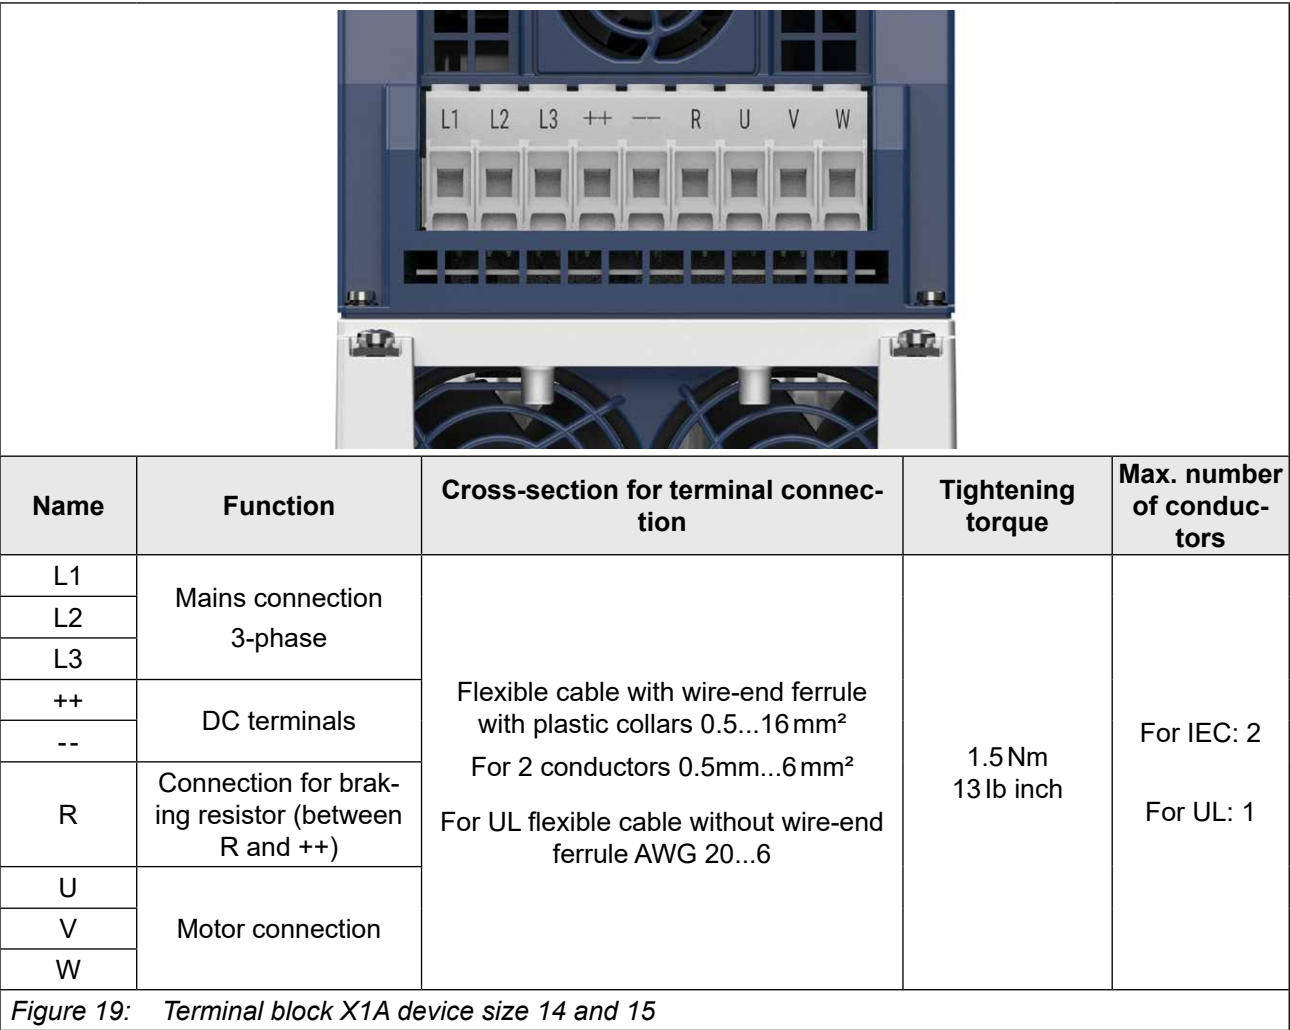

Terminal R can alternatively be labeled with PB.

5.2.1.2 Terminal block X1A device size 16

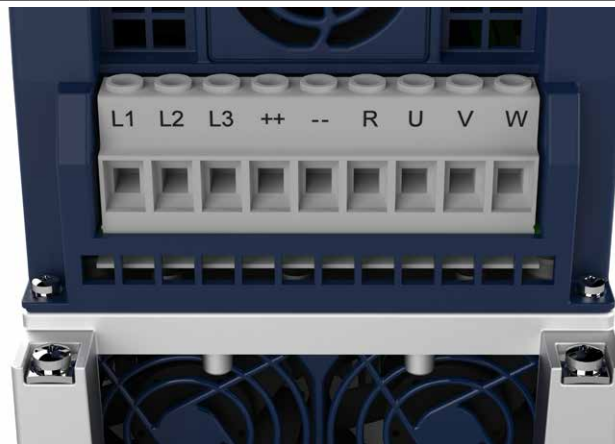

Name	Function	Cross-section for terminal connection	Tightening torque	Max. number of conductors
L1	Mains connection 3-phase	Flexible cable with wire-end ferrule with plastic collars 2.5...10 mm ² For 2 conductors 0.5mm...1.5mm ² For UL flexible cable without wire-end ferrule AWG 26...6	1.5Nm 13 lb inch	For IEC: 2 For UL: 1
L2				
L3				
++	DC terminals			
--				
R	Connection for braking resistor (between R and ++)			
U	Motor connection			
V				
W				

Figure 20: Terminal block X1A device size 16



Terminal R can alternatively be labeled with PB.

5.2.2 Protective earth and functional earth



Protective and functional earth must not be connected to the same terminal.

5.2.2.1 Protective earth

The protective earth (PE) serves for electrical safety particularly personal protection in error case.

⚠ CAUTION



Electric shock due to incorrect dimensioning!

- The earthing cross-section complies with [VDE 0100](#) !

Name	Function	Terminal connection	Tightening torque
PE,	Connection for protective earth	Screw M4 for crimp connector	1.3 Nm 11 lb inch

Figure 21: Connection for protective earth



Incorrect installation of the PE connection

Only the M4 screws may be used to connect the protective earth!

5.2.2.2 Functional earthing

A functional earthing may also be necessary, if for EMC requirements additional potential equalization between devices or parts of the system must be available.



The use of the functional earth (FE) is not required if the frequency inverter is EMC-technically wired.

The functional earth may not be wired green/yellow!



Notes on EMC-compatible installation can be found here.
www.keb.de/fileadmin/media/Manuals/emv/0000neb0000.pdf



5.3 Mains connection

5.3.1 Supply cable

The conductor cross-section of the supply cable is determined by the following factors:

- Input current of the drive controller
- Used line type
- Installation and ambient temperatures
- The locally valid electrical regulations



The application engineer is responsible for the design!

5.3.2 AC mains connection

5.3.2.1 AC supply 3-phase

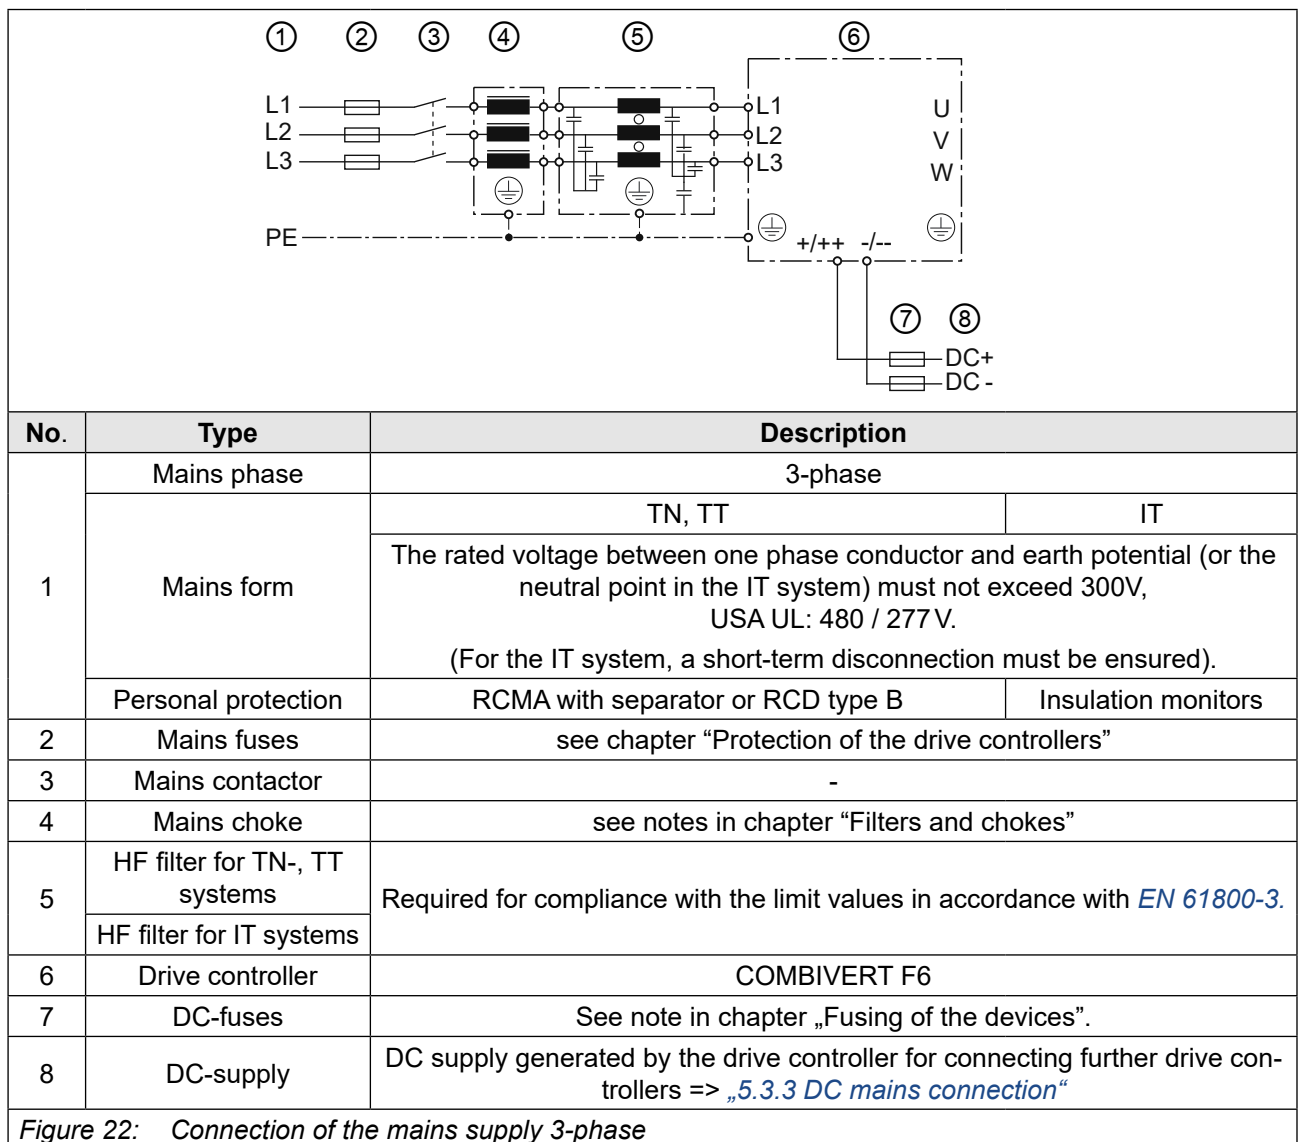


Figure 22: Connection of the mains supply 3-phase

5.3.2.2 Note on hard power systems

The service life of drive controllers with voltage DC link depends on the DC voltage, ambient temperature and the current load of the electrolytic capacitors in the DC link. The use of mains chokes can increase the service life of the condensators to a considerable extent, especially when connecting to "hard" power systems or when under permanent drive load (continuous duty).

The term "hard" power system means that the nodal point power (S_{Net}) of the mains is very high ($\gg 200$) compared to the rated apparent output power of the drive controller (S_{out}).

$k = \frac{S_{Net}}{S_{out}} \gg 200$	e.g.	$k = \frac{2 \text{ MVA (supply transformer)}}{11.4 \text{ kVA (14F6)}} = 176 \longrightarrow \text{no choke required}$
---------------------------------------	------	---



A listing of filters and chokes => „[5.4.1 Filters and chokes](#)“.


5.3.3 DC mains connection

NOTICE


DC operation

► DC operation is only permitted after consultation with KEB!

5.3.3.1 Terminal block X1A DC connection device size 14 and 15

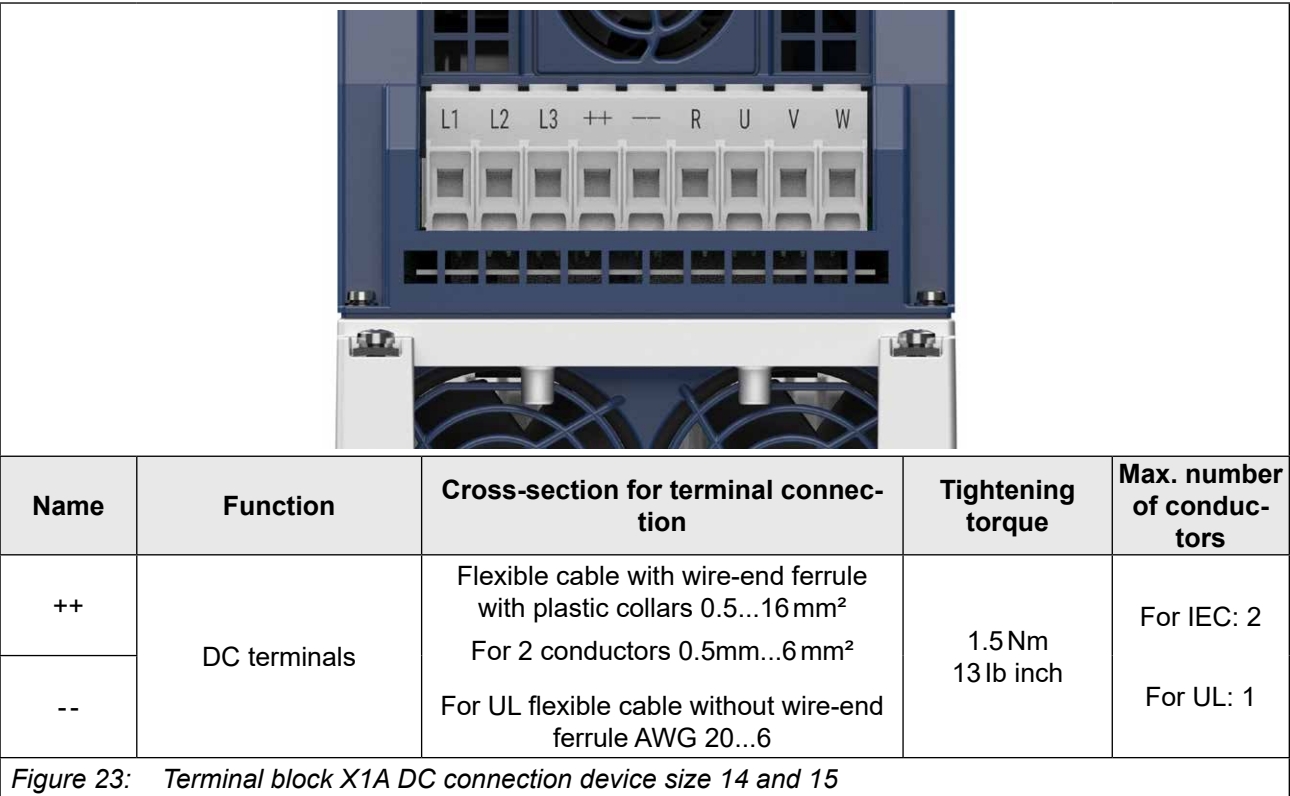


5.3.3.2 Terminal block X1A DC connection device size 16

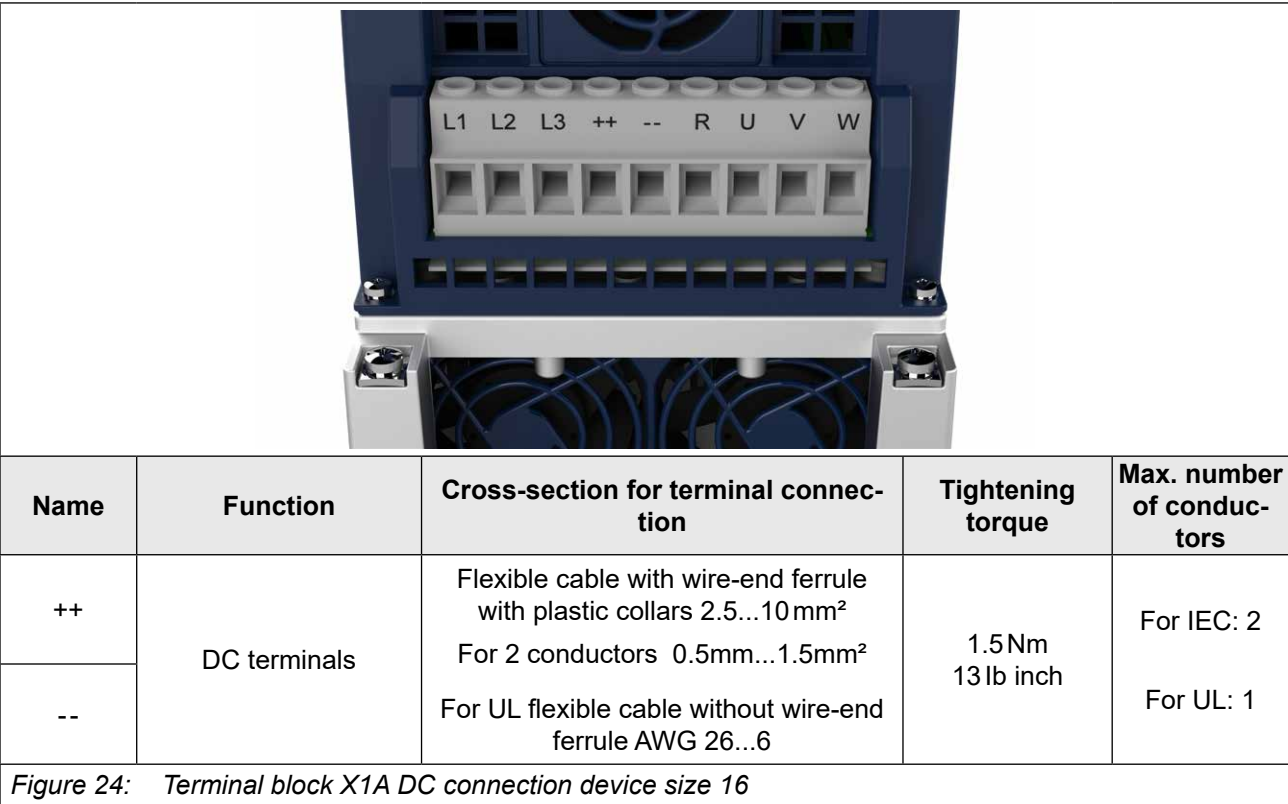

5.3.3.3 Connection at DC voltage supply

NOTICE

Destruction of the drive controller!
► Never exchange “+ / ++” and “- / --”!

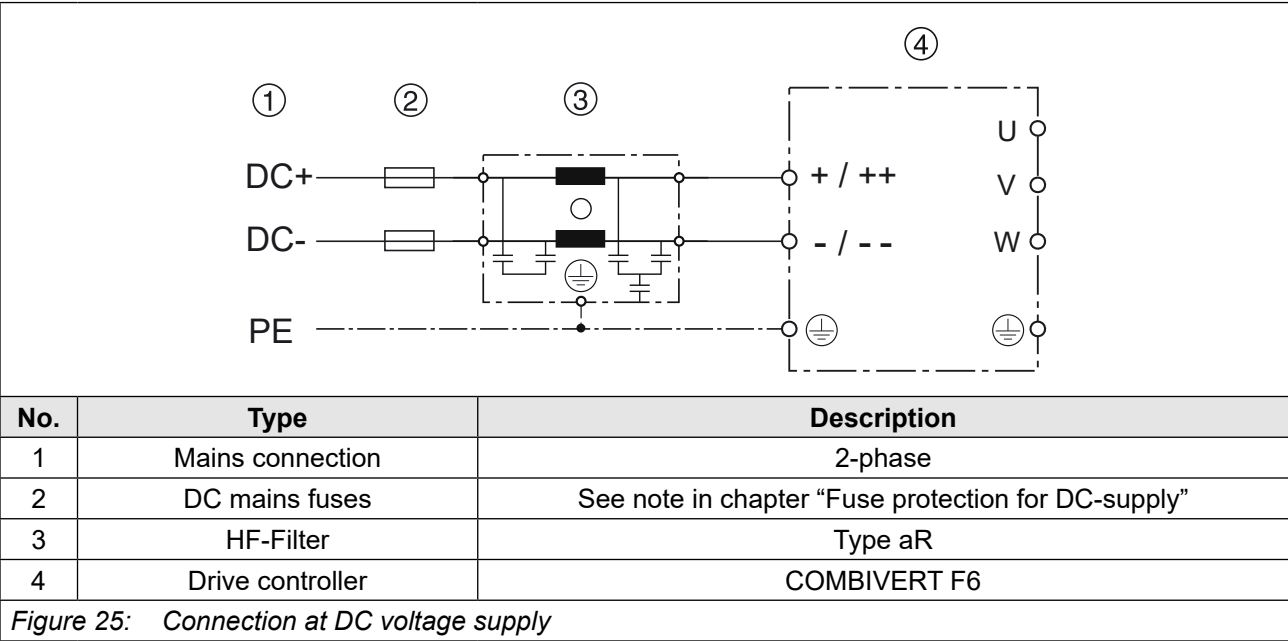

5.3.4 Connection of the motor

5.3.4.1 Wiring of the motor


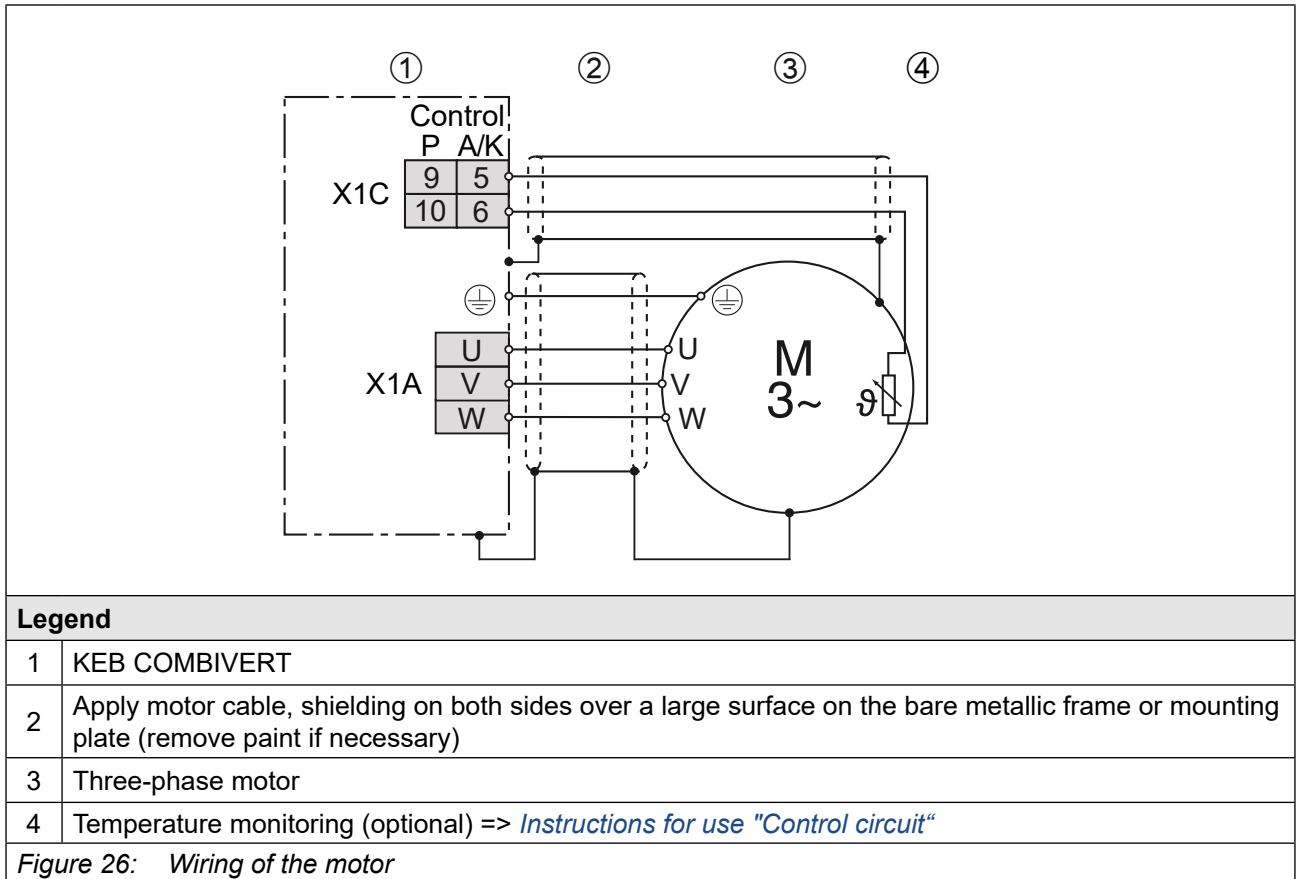


Figure 26: Wiring of the motor


5.3.4.2 Terminal block X1A motor connection device size 14 and 15

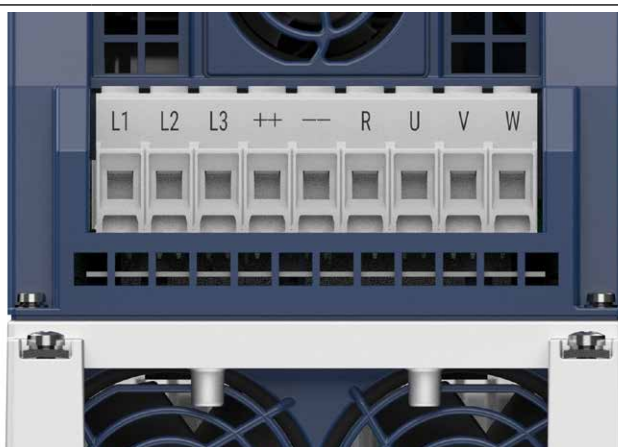

Name	Function	Cross-section for terminal connection	Tightening torque	Max. number of conductors
U	Motor connection	Flexible cable with wire-end ferrule with plastic collars 0.5...16 mm ²	1.5 Nm 13 lb inch	For IEC: 2
V		For 2 conductors 0.5mm...6 mm ²		For UL: 1
W		For UL flexible cable without wire-end ferrule AWG 20...6		

Figure 27: Terminal block X1A motor connection device size 14 and 15

5.3.4.3 Terminal block X1A motor connection device size 16

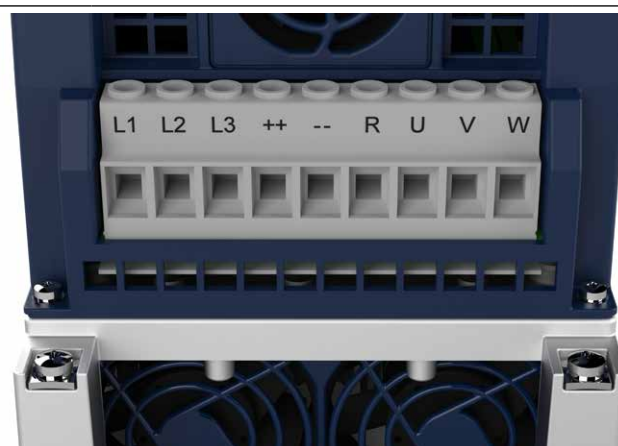


Name	Function	Cross-section for terminal connection	Tightening torque	Max. number of conductors
U	Motor connection	Flexible cable with wire-end ferrule with plastic collars 2.5...10 mm ²	1.5 Nm 13 lb inch	For IEC: 2
V		For 2 conductors 0.5mm...1.5mm ²		For UL: 1
W		For UL flexible cable without wire-end ferrule AWG 26...6		

Figure 28: Terminal block X1A motor connection device size 16

5.3.4.4 Selection of the motor line

The correct cabling as well as the motor line itself play an important part in case of low power in connection with long motor line lengths. Low-capacitance line (phase/phase < 65 pF/m, phase/screen < 120 pF/m) at the inverter output have the following effects:

- allow major motor line lengths („5.3.4.5 Motor cable length and conducted interferences at AC supply“)
- better EMC properties (reduction of the common-mode output currents to earth)

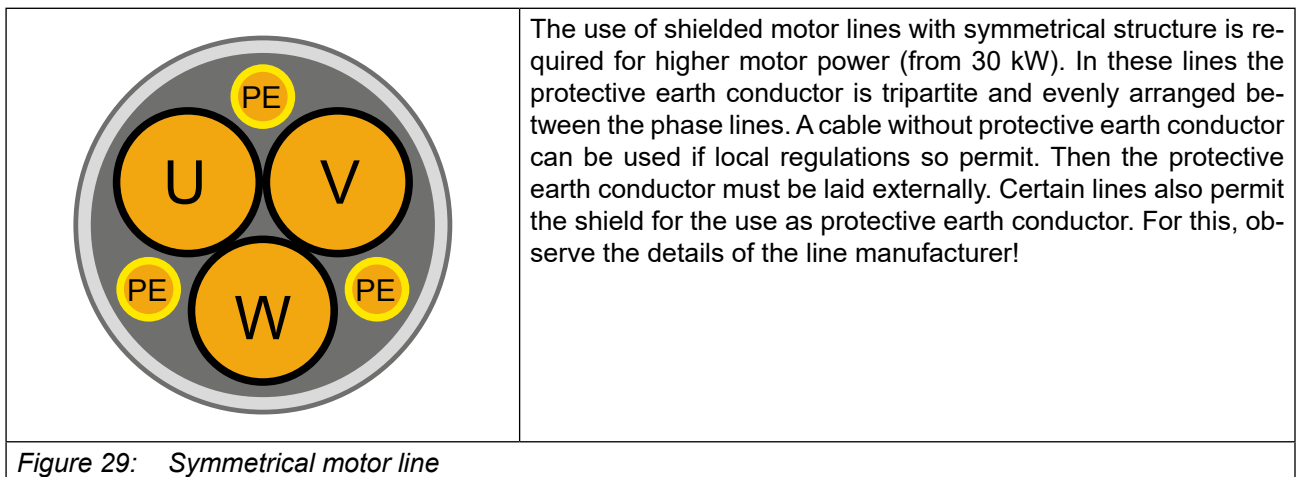

5.3.4.5 Motor cable length and conducted interferences at AC supply

The maximum motor cable length is depending on the capacity of the motor cable as well as on the EMC emitted interference. External measures must be taken here (e.g. the use of a line filter).



The cable length can be increased significantly by using motor chokes or motor filters. KEB recommends the use of motor chokes or filters for a cable length upto 50 m. Motor chokes or filters are absolutely necessary upto 100 m.



Further information on the motor cable length can be found in the corresponding filter instructions.

5.3.4.6 Motor cable length for parallel operation of motors

The resulting motor cable length for parallel operation of motors, or parallel installation with multiple cables arises from the following formula:

$$\text{resulting motor cable length} = \sum \text{single cable lengths} \times \sqrt{\text{Number of motor cables}}$$

5.3.4.7 Motor cable cross-section

The motor cable cross-section is dependent

- on the characteristic of the output current (e.g. harmonic content)
- on the real effective value of the motor current
- on the cable length
- on the type of the used cable
- on the ambient conditions such as bundling and temperature

5.3.4.8 Interconnection of the motor

NOTICE

Incorrect behavior of the motor!

- The connecting-up instructions of the motor manufacturer are always generally valid!

NOTICE

Protect motor against voltage peaks!

- Drive controllers switch at the output with high dV/dt . Voltage peaks that endanger the insulation system at the motor can occur especially in case of long motor cables (>15 m). A motor choke, a dV/dt -filter or sine-wave filter can be used to protect the motor with regard to the operating mode.

5.3.4.9 Connection of the temperature monitoring and brake control (X1C)

A switchable temperature evaluation is implemented in the COMBIVERT.

There are different types for the evaluation available. These are depending on the control board => [instruction manual „control board“](#).

The desired operating mode can be adjusted via software (dr33). If the evaluation is not required, it must be deactivated via software (parameter pn12 = 7) => [Programming manual](#)

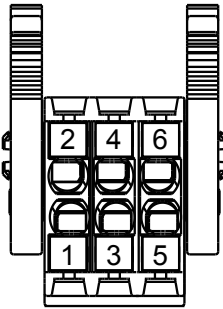
X1C	PIN	Name	Description
	1	BR+	Brake control / output +
	2	BR-	Brake control / output -
	3	reserved	—
	4	reserved	—
	5	TA1	Temperature detection / output +
	6	TA2	Temperature detection / output -

Figure 30: Terminal block X1C for control board APPLICATION and COMPACT

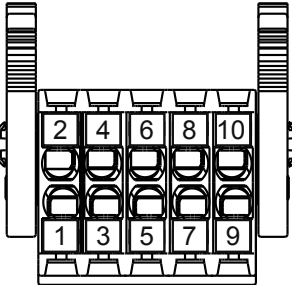
X1C	PIN	Name	Description
	1	BR+	Brake control / output +
	2	BR-	Brake control / output -
	3	0V	For supply of the checkback inputs
	4	24Vout	
	5	DIBR1	Checkback input 1 for brake and relay
	6	DIBR2	Checkback input 2 for brake and relay
	7	reserved	—
	8	reserved	—
	9	TA1	Temperature detection / output +
	10	TA2	Temperature detection / output -



Figure 31: Terminal block X1C for control board PRO

NOTICE

Malfunctions due to incorrect line or laying!

Malfunctions of the control due to capacitive or inductive coupling.

- Do not route cables from the motor temperature sensor (also shielded) together with control cables.
- Cables from the motor temperature sensor within the motor cables may only be used with double shielding!
- The input of the temperature detection has basic isolation.

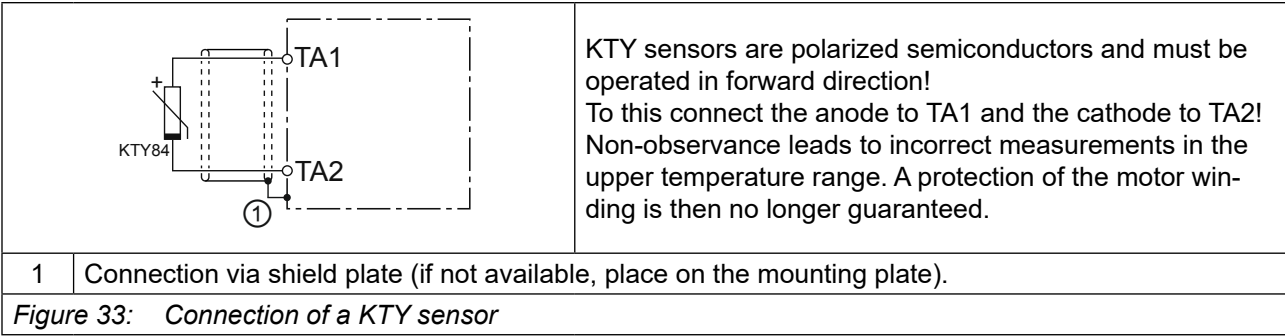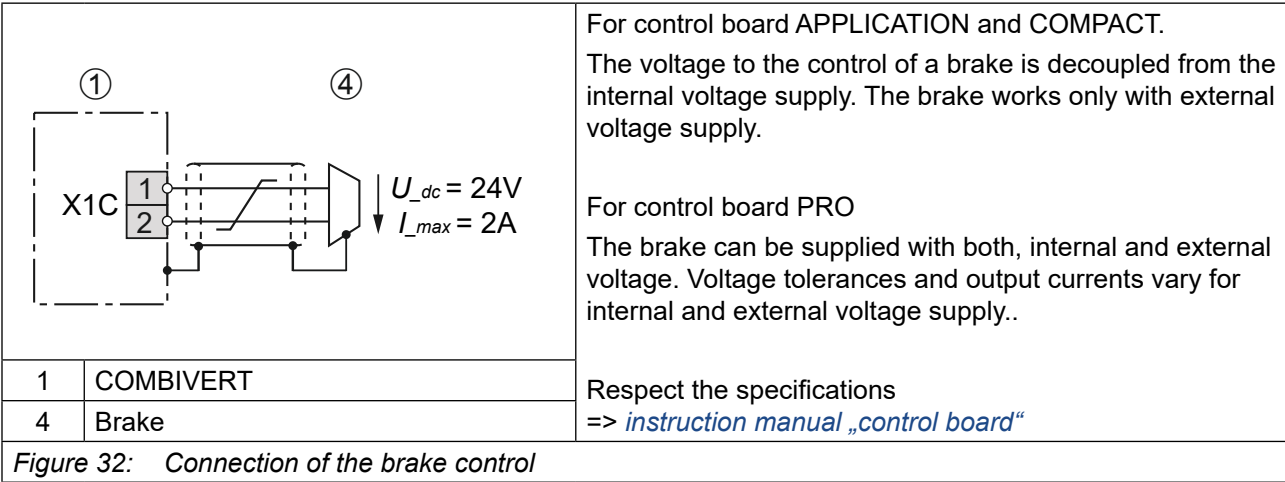

NOTICE

No protection of the motor winding in case of wrong connection.

- Operate KTY sensors in forward direction.
- KTY sensors may not be combined with other detections.



Further information about the wiring of the temperature monitoring and the brake control have to be observed in the respective control unit manual.

5.3.5 Connection and use of a braking resistor

⚠ CAUTION**Fire risk by using brake resistors !**

- ▶ The risk of fire can be significantly reduced by using „intrinsically safe braking resistors“ or by using suitable monitoring functions / circuits.

NOTICE**Destruction of the frequency inverter if the value has fallen below the minimum brake resistance value!**

- ▶ The minimum brake resistance value must not fall below!
„3.2 Device data of the Peak Power devices“

⚠ CAUTION**Hot surfaces caused by load of the braking resistor!****Burning of the skin!**

- ▶ Cover hot surfaces safe-to-touch.
- ▶ Before touching, check the surface.
- ▶ If necessary, attach warning signs on the system.

5.3.5.1 Terminal block X1A connection braking resistor device size 14 and 15

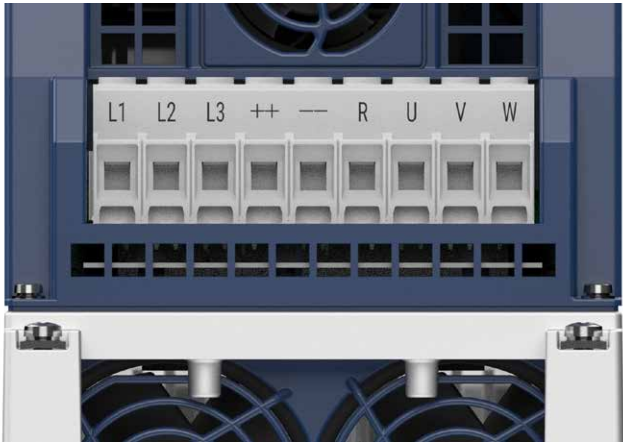
				
Name	Function	Cross-section for terminal connection	Tightening torque	Max. number of conductors
++	Connection for braking resistor (between R and ++)	Flexible cable with wire-end ferrule with plastic collars 0.5...16 mm ² For 2 conductors 0.5mm...6 mm ²	1.5 Nm 13 lb inch	For IEC: 2
R		For UL flexible cable without wire-end ferrule AWG 20...6		For UL: 1

Figure 34: Terminal block X1A connection braking resistor device size 14 and 15

5.3.5.2 Terminal block X1A connection braking resistor device size 16


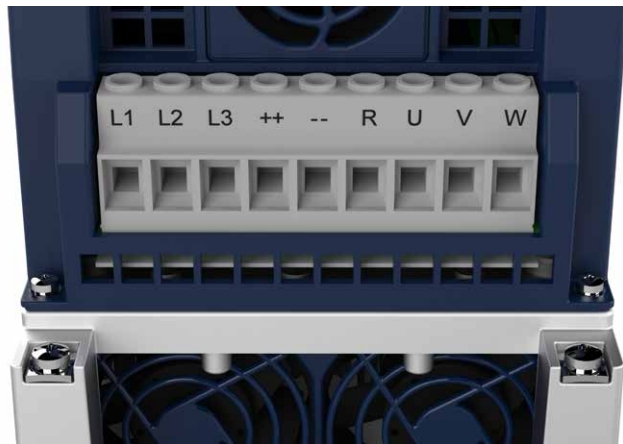
				
Name	Function	Cross-section for terminal connection	Tightening torque	Max. number of conductors
++	Connection for braking resistor	Flexible cable with wire-end ferrule with plastic collars 2.5...10 mm ² For 2 conductors 0.5mm...1.5mm ²	1.5 Nm 13 lb inch	For IEC: 2
R		For UL flexible cable without wire-end ferrule AWG 26...6		For UL: 1

Figure 35: Terminal block X1A connection braking resistor device size 16

5.3.5.3 Use of intrinsically safe braking resistors

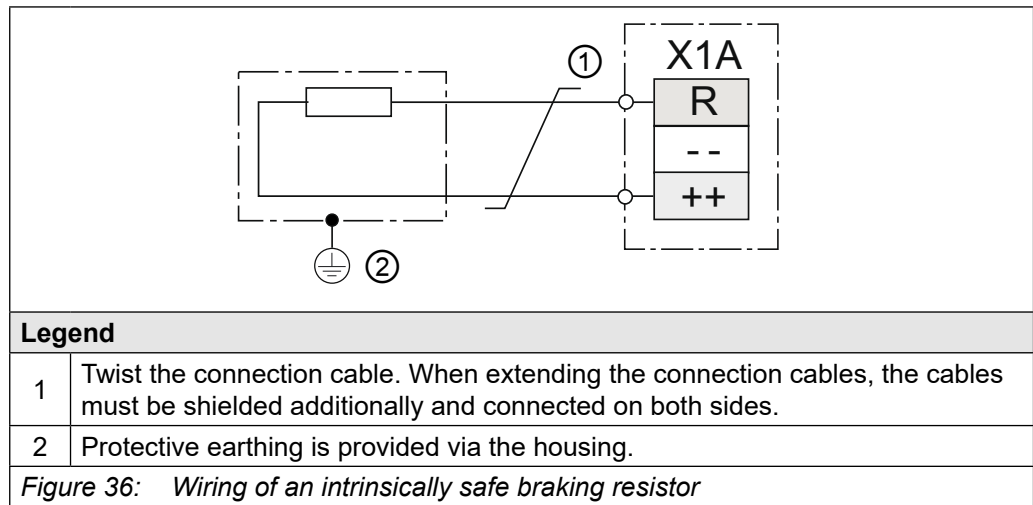

Intrinsically safe braking resistors behave in error case such as a safety fuse. They interrupt themselves without fire risk.

More information about intrinsically safe braking resistors

www.keb.de/fileadmin/media/Manuals/dr/ma_dr_safe-braking-resistors-20106652_en.pdf



5.3.5.4 Use of non-intrinsically safe braking resistors

⚠ WARNING



Use of non-intrinsically safe braking resistors

Fire or smoke in case of overload or fault!

- ▶ Only use braking resistors with temperature sensor.
- ▶ Evaluate temperature sensor.
- ▶ Trigger a fault on the drive controller (e.g. external input).
- ▶ Switching off input voltage (e.g. input contactor).
- ▶ Connection examples for non-intrinsically safe braking resistors
- ▶ => [Instructions for use "Installation braking resistors"](#)



Instructions for use "Installation braking resistors"

www.keb.de/fileadmin/media/Manuals/dr/ma_dr_braking-resistors-20116737_en.pdf



5.3.6 DC-bus connection

The DC link of several drive controllers are coupled in a DC-bus connection. This enables energy to be exchanged between the devices and increases the energy efficiency of the application.


As part of a DC-bus connection, this drive controller can either be supplied via the DC terminals => „[5.3.3 DC mains connection](#)“ or supply other drive controllers via the DC terminals => „[5.3.2 AC mains connection](#)“.



KEB drive converters meet the requirements of the EMC product standard EN IEC 61800-3 for DC power supplies. Due to the large number of possible interconnection options in the DC network, the user is responsible for ensuring the conformity of the overall system.

The following additional safety instructions must be observed when using this drive controller in a DC-bus connection:

- This drive controller may only be operated together with other F6 and S6 drive controllers of the 400V class in a DC-bus connection.
- This drive controller must be installed in an enclosure.
- This drive controller must be protected with fuses at the DC terminals => „[3.2.6.2 Protection fusing of 400 V devices with DC supply](#)“.
- If one fuse in the DC-bus connection blows as a result of a short circuit, all fuses in the DC-bus connection should be replaced due to the risk of prior damage.
- The parameterisation of the input phase failure detection must be adapted => F6 Programming manual.

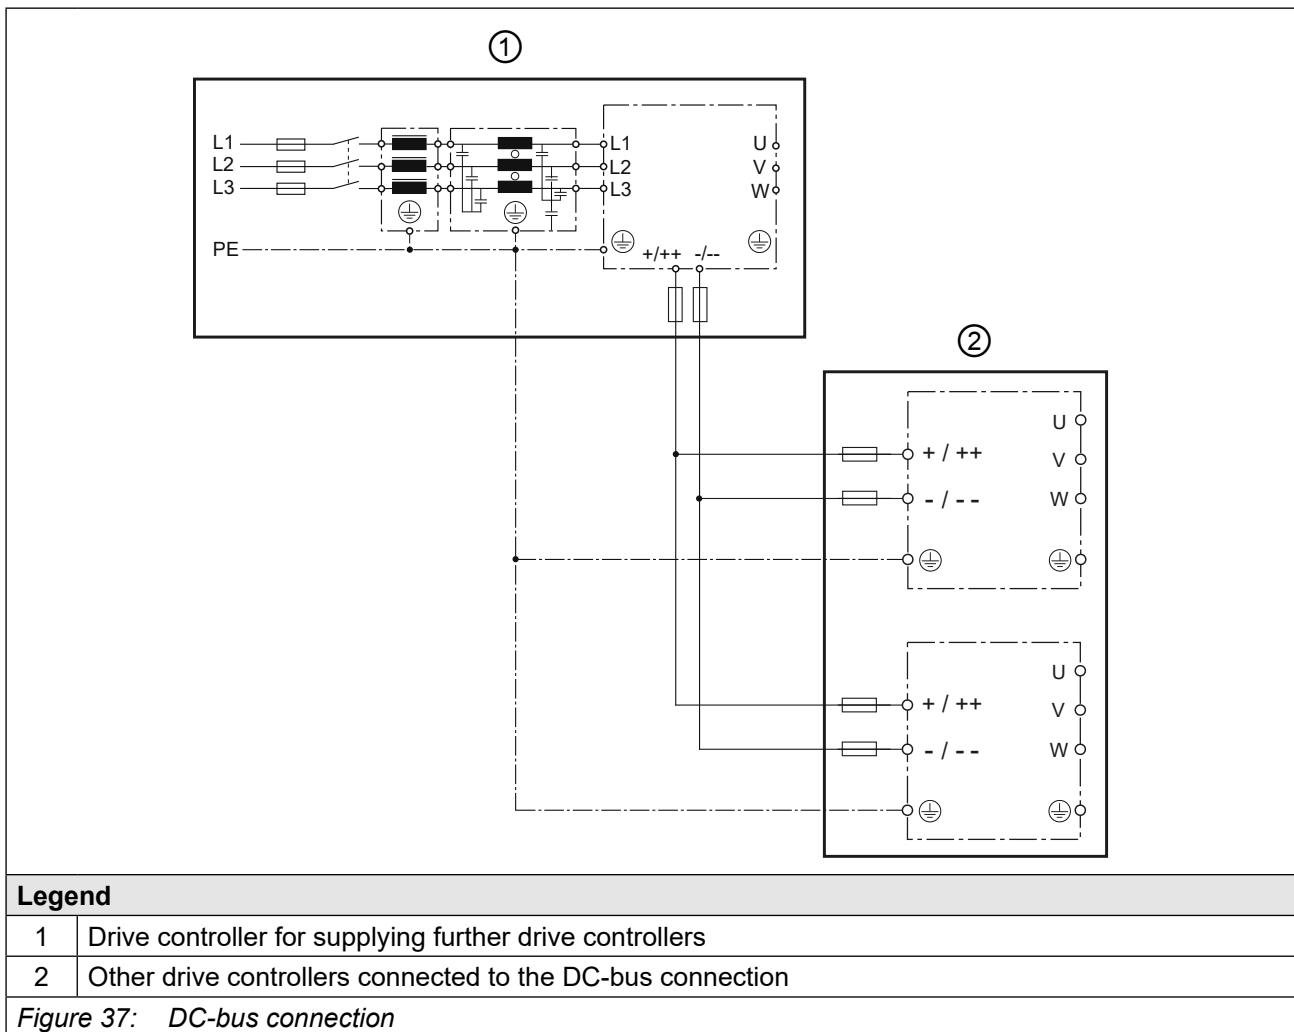

① When using this drive controller to supply other drive controllers via the DC terminals, the following must also be observed:

- The max. pre-charging current must not be exceeded => „[Table 23: DC link / braking transistor function of the Peak Power devices](#)“.
- Each drive converter in the DC bus must have an internal pre-charging circuit.
- Overloading of the rectifier must be prevented by the user => „[3.2.4 Overview of rectifier data for 400 V devices](#)“.

5.4 Accessories

5.4.1 Filters and chokes

Voltage class	Drive controller size	HF filter	Mains choke 50 Hz / 4% U_k
400 V	14	14E6T60-3000 14E6T60-1050	14Z1B04-1000
	15	16E6T60-3000 16E6T60-1050	15Z1B04-1000
	16	16E6T60-3000	16Z1B04-1000

Table 28: Filters and chokes for Peak Power devices



The specified filters and chokes are designed for rated operation.

5.4.2 Mounting kit shield connection brackets

Name	Material number
Mounting kit shield connection bracket control unit	00F6V80-2000
Mounting kit shield connection bracket power unit for built-in version	00F6V80-2001
Mounting kit shield connection bracket power unit for push-through version IP20-ready / IP54-ready	00F6V80-2002

Table 29: Mounting kit shield connection brackets

5.4.3 Seal for IP54-ready devices

Name	Material number
Seal IP54	20F6T45-0001

Table 30: Seal for IP54-ready devices

5.4.4 Side-mounted braking resistors



Technical data and design about intrinsically safe braking resistors => https://www.keb.de/fileadmin/media/Manuals/dr/ma_dr_safe-braking-resistors-20106652_en.pdf



Technical data and design about non-intrinsically safe braking resistors => https://www.keb.de/fileadmin/media/Manuals/dr/ma_dr_braking-resistors-20116737_en.pdf



6 Approvals and certifications

6.1 CE-Marking

The drive converters marked with a CE logo comply with the requirements specified by European Union directives. The CE Declaration of Conformity is available on the Internet at www.keb-automation.com/de/suche .



For further information regarding the CE declarations of conformity
=> „6.3 Further informations and documentation“.

6.2 UL certification

	Acceptance according to UL is marked at KEB drive controllers with the adjacent logo on the nameplate.	UL file number E167544
---	--	---------------------------

To be conform according to UL for use on the North American and Canadian Market the following additionally instructions must be observed (original text of the UL-File):

- Only for use in WYE 480V/277V supply sources.
- Control Board Rating of relays (30Vdc/1A)
- Brake resistor ratings and duty cycle: see RATINGS
- Maximum Surrounding Air Temperature 45°C
- Use in a Pollution Degree 2 environment
- Power Terminals X1A
Use 75°C Copper Conductors Only

CSA:

- Power Terminals X1A: Maximum wire sizes and tightening torques:

MKDS 10HV/9-ZB-10.16 (Phoenix)
max AWG 6,
15 lb-inch (1.7 Nm)

LU10.16 (Weidmueller):
max. AWG 8 (maximum stripping length 10 mm),
20.5 lb-inch (2.3 Nm)
- During the UL evaluation, only Risk of Electrical Shock and Risk of Fire aspects were investigated. Functional Safety aspects were not evaluated!
- WARNING – The opening of the branch circuit protective device may be an indication that a fault current has been interrupted. To reduce the risk of fire or electrical shock, current-carrying parts and other components of the controller should be examined and replaced if damaged. If burnout of the current element of an overload relay occurs, the complete overload relay must be replaced.
- AVERTISSEMENT
LE DÉCLENCHEMENT DU DISPOSITIF DE PROTECTION DU CIRCUIT DE DÉRIVATION PEUT ÊTRE DÙ À UNE COUPURE QUI RÉSULTE D'UN COURANT DE DÉFAUT. POUR LIMITER LE RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUE, EXAMINER LES PIÈCES PORTEUSES DE COURANT ET LES AUTRES ÉLÉMENTS DU CONTRÔLEUR ET LES REMPLACER S'ILS SONT ENDOMMAGÉS. EN CAS DE GRILLAGE DE L'ÉLÉMENT TRAVERSÉ PAR LE COURANT DANS UN RELAIS DE SURCHARGE, LE RELAIS TOUT ENTIER DOIT ÊTRE REMPLACÉ

APPROVALS AND CERTIFICATIONS

- Suitable For Use On A Circuit Capable Of Delivering Not More Than 5000 rms Symmetrical Amperes, 480 Volts Maximum when protected by J Class Fuses or by a Motor Controller, as specified in the instruction manual.

Suitable For Use On A Circuit Capable Of Delivering Not More Than 30000 rms Symmetrical Amperes, 480 Volts Maximum when protected by Semiconductor Fuses or by a Motor Controller, as specified in the manual.

When DC supplied:

Suitable For Use On A Circuit Capable Of Delivering Not More Than 30000 rms Symmetrical Amperes, 680 Volts DC Maximum when protected by Semiconductor Fuses as specified in the manual .

6.3 Further informations and documentation

You find supplementary manuals and instructions for the download under www.keb-automation.com/search

General instructions

- EMC and safety instructions
- Manuals for additional control boards, safety modules, fieldbus modules, etc.

Instruction and information for construction and development

- Input fuses in accordance with UL
- Programming manual for control and power unit
- Motor configurator to select the appropriate drive converter and to create downloads for parameterizing the drive converter

Approvals and approbations

- Declaration of conformity CE
- TÜV certificate
- FS certification

Other markings and approvals not listed here are identified by a corresponding logo on the rating plate or device, if applicable. The corresponding certificates are available on our website.

Others

- COMBIVIS, the software for comfortable parameterization of drive converters via PC (available per download)
- EPLAN drawings

7 Revision history

Version	Date	Description
00	2022-11	Series version of the instructions for use
01	2023-01	Information on braking current corrected
02	2023-12	Inclusion of the device sizes 14 and 15. Cover page adapted. Editorial changes.
03	2025-10	Description of 400 V DC-ready devices added, glossary and standards updated. Information on motor protection switches, editorial changes.

Glossary

0V	Earth-potential-free common point	Encoder emu- lation	Software-generated encoder output
1ph	1-phase mains	End customer	The end customer is the user of the customer product
3ph	3-phase mains	Endat	Bidirectional encoder interface of the company Heidenhain
AC	AC current or voltage	EtherCAT	Real-time Ethernet bus system of the company Beckhoff
AFE	From 07/2019 AIC replaces the previous name AFE	Ethernet	Real-time bus system - defines protocols, plugs, types of cables
AFE filter	From 07/2019 AIC filter replaces the previous name AFE filter	FE	Functional earth
AIC	Active Infeed Converter	FSoE	Functional Safety over Ethernet
AIC filter	Filter for Active Infeed Converter	FU	Drive controller
Application	The application is the intended use of the KEB product	GND	Reference potential, ground
ASCL	Asynchronous sensorless closed loop	GTR7	Braking transistor
Auto motor ident.	Automatically motor identification; calibration of resistance and inductance	HF filter	KEB specific term for an EMC filter (for description see EMC filter).
AWG	American wire gauge	Hiperface	Bidirectional encoder interface of the company Sick-Stegmann
B2B	Business-to-business	HMI	Human machine interface (touch screen)
BiSS	Open source real-time interface for sensors and actuators (DIN 5008)	HSP5	Fast, serial protocol
CAN	Fieldbus system	HTL	Incremental signal with an output voltage (up to 30V) -> TTL
c.d.f.	Cyclic duration factor	IEC	IEC xxxxx stands for an international standard of the International Electrotechnical Commission
CDM	Complete drive module including auxiliary equipment (control cabinet)	IPxx	Protection class (xx for class)
COMBIVERT	KEB drive controller	KEB product	The KEB product is subject of this manual
COMBIVIS	KEB start-up and parameterizing software	KTY	Silicium temperature sensor (polarized)
Customer	The customer has purchased a KEB product from KEB and integrates the KEB product into his product (customer product) or resells the KEB product (dealer)	Manufacturer	The manufacturer is KEB, unless otherwise specified (e.g. as manufacturer of machines, engines, vehicles or adhesives)
DC	DC current or voltage	MCM	American unit for large wire cross sections
DI	Demineralized water, also referred to as deionized (DI) water	Modulation	Means in drive technology that the power semiconductors are controlled
DIN	German Institut for standardization	MTTF	Mean service life to failure
DS 402	CiA DS 402 - CAN device profile for drives	NHN	Standard elevation zero; based on the specified height definition in Germany (DHHN2016). The international data generally deviate from this by only a few cm to dm, so that the specified value can be applied to the regionally applicable definition.
ELV	Extra-low voltage	OC	Overcurrent
EMC filter	EMC filters are used to suppress conducted interferences in both directions between the drive controller and the mains	OH	Overheat
Emergency stop	Shutdown of a drive in emergency case (not de-energized)	OL	Overload
Emergency switching off	Switching off the voltage supply in emergency case		
EMS	Energy Management System		
EN	European standard		

OSSD	Output signal swithching device; - an output signal that is checked in regular intervals on its shutdown. (safety technology)
PDS	Power drive system incl. motor and measuring probe
PE	Protective earth
PELV	Protective Extra Low Voltage
PFD	Term used in the safety technology (EN 61508-1...7) for the size of error probability
PFH	Term used in the safety technology (EN 61508-1...7) for the size of error probability per hour
PLC	Programmable logic controller
Pt100	Temperature sensor with R0=100Ω
Pt1000	Temperature sensor with R0=1000Ω
PTC	PTC-resistor for temperature detection
PWM	Pulse width modulation
RJ45	Modular connector with 8 lines
SCL	Synchronous sensorless closed loop
SELV	Safe extra-low voltage, unearthed
SIL	The safety integrity level is a measure for quantifying the risk reduction. Term used in the safety technology (EN 61508 -1...7)
SS1	Safety function „Safe stop 1“ in accordance with IEC 61800-5-2
SSI	Synchronous serial interface for encoder
STO	Safety function „Safe Torque Off“ in accordance with IEC 61800-5-2
TTL	Logic with 5 V operating voltage
USB	Universal serial bus
VARAN	Real-time Ethernet bus system

List of Figures

Figure 1:	Nameplate (exemplary).....	20
Figure 2:	Configurable options	21
Figure 3:	Switch-off time t depending on the overload I/IN at OC level 230 %.....	28
Figure 4:	Switch-off time t depending on the overload I/IN at OC level 240 %.....	29
Figure 5:	Typical overload characteristics in the lower output frequencies (OL2) example device size 16	31
Figure 6:	Block diagram of the energy flow.....	39
Figure 7:	Switching behaviour of the fan example heat sink fan.....	42
Figure 8:	Dimensions built-in version air cooler	43
Figure 9:	Dimensions push-through version air cooler IP20-ready	44
Figure 10:	Dimensions push-through version air cooler IP54-ready	45
Figure 11:	Mounting distances	47
Figure 12:	Installation of IP54-ready devices	48
Figure 13:	Control cabinet ventilation.....	49
Figure 14:	Airflow of the drive converter	49
Figure 15:	F6 housing 2 top view	50
Figure 16:	F6 housing 2 front view.....	51
Figure 17:	F6 housing 2 rear view with control board APPLICATION	52
Figure 18:	Input circuit.....	53
Figure 19:	Terminal block X1A device size 14 and 15.....	54
Figure 20:	Terminal block X1A device size 16.....	55
Figure 21:	Connection for protective earth.....	56
Figure 22:	Connection of the mains supply 3-phase.....	57
Figure 23:	Terminal block X1A DC connection device size 14 and 15	59
Figure 25:	Connection at DC voltage supply.....	60
Figure 24:	Terminal block X1A DC connection device size 16	60
Figure 26:	Wiring of the motor.....	61
Figure 27:	Terminal block X1A motor connection device size 14 and 15	62
Figure 28:	Terminal block X1A motor connection device size 16	62
Figure 29:	Symmetrical motor line	63
Figure 30:	Terminal block X1C for control board APPLICATION and COMPACT	65
Figure 31:	Terminal block X1C for control board PRO	65
Figure 32:	Connection of the brake control	66
Figure 33:	Connection of a KTY sensor	66
Figure 34:	Terminal block X1A connection braking resistor device size 14 and 15	68
Figure 35:	Terminal block X1A connection braking resistor device size 16	68
Figure 36:	Wiring of an intrinsically safe braking resistor.....	69
Figure 37:	DC-bus connection	71

List of Tables

Table 1:	Part code.....	19
Table 2:	Climatic environmental conditions	22
Table 3:	Mechanical environmental conditions	23
Table 4:	Further environmental operating conditions.....	23
Table 5:	Device classification.....	24
Table 6:	Electromagnetic compatibility	24
Table 7:	Overview of the Peak Power device data	26
Table 8:	Input voltages and frequencies of the 400V devices	26
Table 9:	DC link voltage for 400V devices	26
Table 10:	Output voltages and frequencies of the 400V devices	27
Table 11:	Example of the calculation of the possible motor voltage:.....	27
Table 12:	Input and output currents / overload of Peak Power devices	27
Table 13:	Frequency-dependent maximum current for device size 14	32
Table 14:	Frequency-dependent maximum current for device size 15	33
Table 15:	Frequency-dependent maximum current for device size 16	33
Table 16:	Overview of rectifier data for 400 V devices	34
Table 17:	Power dissipation of the Peak Power devices	34
Table 18:	Fusing of the Peak Power devices.....	35
Table 19:	DC Fusing of the 400 V / 480 V devices	36
Table 20:	Recommended motor protective circuit-breakers / circuit breakers for 400 V / 480 V appliances.....	37
Table 21:	Alternative motor protective circuit-breakers / circuit breaker for 400 V / 480 V appliances.....	37
Table 22:	Switching frequency and temperature of the Peak Power devices.....	38
Table 23:	DC link / braking transistor function of the Peak Power devices.....	40
Table 24:	Fan.....	41
Table 25:	Switching points of the fans	42
Table 26:	Mounting instructions for built-in version.....	46
Table 27:	Mounting instructions for push-through version	46
Table 28:	Filters and chokes for Peak Power devices.....	72
Table 29:	Mounting kit shield connection brackets	72
Table 30:	Seal for IP54-ready devices.....	72



MORE KEB PARTNERS WORLDWIDE:

www.keb-automation.com/contact





Automation with Drive

www.keb-automation.com

KEB Automation KG Suedstrasse 38 D-32683 Barntrop Tel. +49 5263 401-0 E-Mail: info@keb.de